
Instructions on Updating the F4T Code:

1. Download the F4TUpdate file and copy it to the root directory of a USB thumb drive. Do not rename the file. The file name must remain as F4TUpdate for the F4T to recognize it.
2. Insert the thumb drive into one of the two USB ports on the back of the F4T.
3. Update the firmware by pushing: **Menu->Settings->Update->Install Update** buttons.