



HanseVIEW

(C) 1995-2013 Vibration Research Corporation

Vibration Research Corporation
2385 Wishere Dr. Suite A
Jenison, MI 49428 USA
PH (616) 669-3028
FAX (616) 669-5337
www.vibrationresearch.com

March 2013

HanseVIEW

(C) 1995-2013 Vibration Research Corporation

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of Vibration Research Corporation.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Printed: March 2013 in USA

Table of Contents

Part I Help Index	8
Part II How to ...	10
1 How to set up the system	10
Quick setup Instructions	10
Computer requirements	10
Install the hardware	10
How to install CompactDAQ	10
How to install the software	11
How to set the accelerometer calibration	12
How to calibrate the system	13
How to enter tests	14
How to run tests	18
How to display and print graphs	19
How to store and retrieve data	20
How to convert tests created using the version 1.x software	20
How to create customized reports	21
How to enable a status output on a serial port	21
Report parameter names	21
Report graph types	23
Part III Menu Commands	26
1 File menu	26
File menu commands	26
New Graph command (File menu)	26
Copy Graph command (File menu)	27
Save as .. Data File (File menu)	27
Save As .. Meta File (File Menu)	27
Save as .. Text File (File menu)	27
Save as .. Matlab File (File Menu)	28
Save as .. Bitmap File (File menu)	28
Save as .. PNG File (File Menu)	28
Open Data command (File menu)	28
Previous Data command (File menu)	29
Next Data command (File menu)	29
Read Old File Formats..Profiles command (File menu)	29
Read Old File Formats..Data command (File menu)	30
Create Report Command (File Menu)	30
Print Report Command (File Menu)	30
Print Active Graph Command (File menu)	30
Printer Setup ... command (File menu)	30
Print Options command (File menu)	31
Explorer command (File menu)	32
Exit (File Menu)	32
2 Configuration menu	33
Configuration menu commands	33

Parameters command (Configuration menu)	33
Remote Inputs command (Configuration menu)	34
Configure Channel Labels	36
System Calibration command (Configuration menu)	37
Temperature Calibration command (Configuration menu)	38
Accelerometer Sensitivity command (Configuration menu)	39
Units command (Configuration menu)	40
Security Menu (ConfigurationMenu)	41
Controller PID (Configuration menu)	41
3 Test menu.....	43
Test menu commands	43
Select Test Type command (Test menu)	43
Run Test command (Test menu)	44
Stop Test command (Test menu)	44
Advance to next level (Test menu)	44
Test Schedule command (Test menu)	44
New Test command (Test menu)	45
Open Test command (Test menu)	46
Open Recent Test command (Test menu)	46
Edit Test command (Test menu)	46
4 Graph menu.....	46
Graph Menu Commands	46
Graph Colors command (Graph menu)	47
Graph Update Time command (Graph Menu)	47
Pause Graph Updates (Graph menu)	47
Edit Graph Settings command (Graph menu)	48
Y-Axis Autoscale command (Graph menu)	48
Full Autoscale command (Graph menu)	48
Refresh Graph command (Graph menu)	48
5 Cursor menu.....	49
Cursor Menu Overview	49
Cursor Display command (Graph menu)	49
Set Base Cursor	50
Next Differential Cursor Command	50
Prev Differential Cursor command (Cursor menu)	50
Standard Cursor command (Cursor menu)	51
Delta Cursor command (Cursor menu)	51
Slope Cursor command (Cursor menu)	51
Minimum Cursor command (Cursor menu)	51
Maximum Cursor command (Cursor menu)	51
Mean Cursor command (Cursor menu)	51
Dual Cursor command (Cursor menu)	51
RMS Cursor command (Cursor menu)	52
Add Annotation command (Graph menu)	52
Remove Annotation command (Graph menu)	52
Remove All Annotation command (Graph Cursor)	52
Move Annotation command (Graph menu)	53
6 View menu.....	53
View menu commands	53
Toolbar command (View menu)	53
Status Bar command (View menu)	54
Control Buttons command (View menu)	55
Reset Control Buttons command (View menu)	55

ToolTips command (View menu)	55
View Chamber Big Display command (View menu)	55
Cursor Display command (View Menu)	56
Temperatures (3-16) command (View Menu)	57
Accelerometers (1-4) command (View Menu)	57
7 Window menu.....	57
Window menu commands	57
New Window command (Window menu)	58
Cascade command (Window menu)	58
Tile Horizontal command (Window menu)	58
Tile Vertical command (Window Menu)	58
Arrange Icons command (Window menu)	58
1, 2, ... command (Window menu)	58
8 Help menu.....	59
Help menu commands	59
Help command (Help menu)	59
Contents and Index command (Help menu)	59
Context Help	59
About command (Help menu)	59
Part IV Test Settings	62
1 Chamber Define Dialog Box.....	62
2 Chamber Define Outputs.....	63
3 Chamber Define Vibration PID.....	64
4 Chamber Define Limits.....	65
5 Chamber Define Parameters tab.....	66
6 Chamber Define Accelerometers tab.....	68
7 Chamber Define Temperature tab.....	70
8 Chamber Define Data tab.....	71
Part V Control Centers	74
1 Chamber Control Center.....	74
2 Repetitive Shock Control Center.....	75
3 Temperatures 3-16.....	75
Part VI Typical Views	78
1 Chamber CRT View.....	78
Part VII Stop Codes	80
1 Stop Codes.....	80
2 Running Test.....	80
3 Starting Schedule.....	80
4 Remote Start.....	80
5 Remote Stop.....	80
6 Front Panel Start.....	80

7	Front Panel Stop.....	80
8	End of Timed Test.....	81
9	Test Parameters Changed.....	81
10	Stop Button Pressed.....	81
11	Emergency Stop.....	81
12	Invalid Remote Test.....	81
13	Starting Test.....	81
14	Chamber Exceeded High Limit.....	82
15	Exceeded Temperature High Limit.....	82
16	Exceeded Humidity High Limit.....	82
17	Controller Alarm.....	82
18	Remote Start Error.....	82

Part VIII Graph Settings 84


1	Graph settings.....	84
---	---------------------	----

Part IX Dialog Boxes 86

1	Schedule Loop.....	86
2	Cursor Display dialog box.....	86
3	Manually Edit Setpoints.....	86
4	Message dialog box.....	87
5	Wait message.....	87
6	Notice Message dialog box.....	87
7	Password Entry dialog box.....	87
8	Change Password.....	90
9	Start Time Offset.....	90
10	File Dialog.....	90
11	Windows Elements.....	91
	System Menu	91
	Restore command (System menu).....	91
	Move command (System menu).....	91
	Size command (System menu).....	92
	System Minimize Command (System menu).....	92
	Maximize command (System menu).....	92
	Close command (System menu).....	92
	Title Bar	93

Index 95

Part

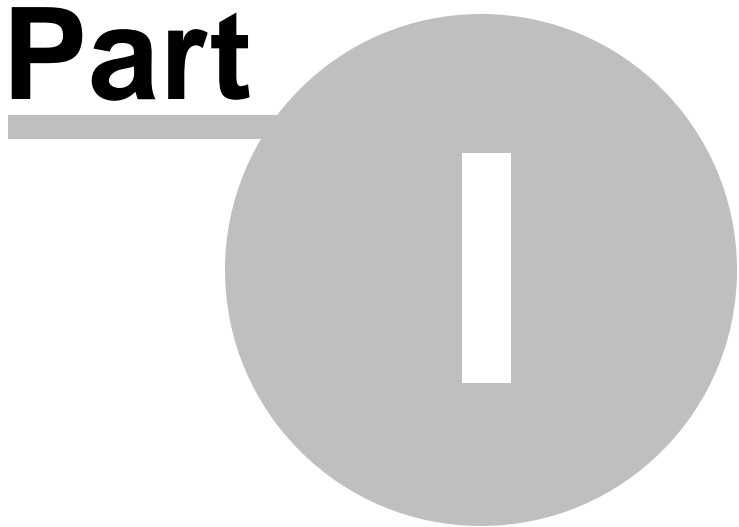

1 Help Index

HanseVIEW Help Index

How To...

- Set up the system
- Set the accelerometer calibration
- Calibrate the system
- Enter test definitions
- Run tests
- Display and print graphs
- Store and retrieve data
- Convert tests created using the version 1.x software
- Create customized reports

Call Vibration Research Corporation at (616) 669-3028 with additional questions.

Menu Commands


- File menu
- Configuration menu
- Test menu
- Graph menu
- View menu
- Window menu
- Help menu

Control Center

Typical Screen

Stop Codes

Part

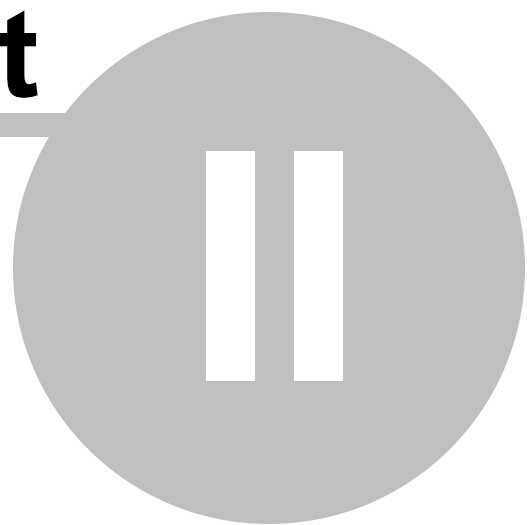

2 How to ...

2.1 How to set up the system

2.1.1 Quick setup Instructions

Quick Setup Instructions

1. If you are installing the hardware into your own computer, read the "Computer Requirements" section.
2. Install the software as described in the "How to install the software" section.
3. Install the hardware as described in the "How to install the hardware" section.
4. Run HanseVIEW by clicking the HanseVIEW icon on the desktop.
5. Set the accelerometer mV/g levels as described in the "How to Set the Accelerometer Calibration" section.
6. Read the rest of the manual (or online help) for details on how to change parameters, change tests, and change test types. Note: Pressing the <F1> key at any time while running HanseVIEW will open up a window with help information describing the active window or dialog box.

2.1.1.1 Computer requirements

Computer requirements

- A Pentium computer (We recommend 350MHz or faster). The program will run on 486 machines, but the graph display speed will be unacceptable.
- VGA video card & monitor. We recommend using a screen resolution of 1024 x 768 or higher.
- Mouse and keyboard
- 3.5" floppy disk drive or CD-ROM drive or network connection.
- Hard disk drive with 50 MB of free space.
- Microsoft Windows 95, 98, NT 4.0, 2000, XP or VISTA operating system.
- Parallel port for the software protection key and printer.
- 16 MB RAM minimum (64MB recommended).
- Any Windows-compatible printer (optional).
- Vibration Research Corp. supplies the analog I/O unit, and the software key.

2.1.1.2 Install the hardware

2.1.1.2.1 How to install CompactDAQ

About the Key

The software key is shipped taped to the inside cover of the HanseVIEW Users Manual. This key is essential to the proper functioning of HanseVIEW. It is the key that unlocks the software, allowing you to run the test types that you have purchased. The key must be plugged into the USB port on the controller computer. Always install the Key Driver from the installation CD PRIOR to plugging in the USB key.

You can install and run the HanseVIEW program on a computer without the key attached (for example, your office computer) to read in data files created by the controller computer, and print graphs and reports of that data. All functions will work without the key attached, with the exception of actually running a test.

Connecting the CompactDAQ Ethernet Chassis:



1. Set up the computer in the conventional configuration, with power cables, mouse, keyboard, and monitor.
2. Install the NI-DAQmx software on the PC. This software can be located in the Drivers folder on the HanseVIEW install CD. This will require that the PC be rebooted.
3. Connect the cDAQ chassis to earth ground. Then install I/O modules. Refer to the module operating instructions for signal connections.
4. Connect the cDAQ chassis to a network port or directly to the network card in your computer. Then connect the power supply.
5. Run the **Measurement & Automation Explorer** software from National Instruments.
6. If the device is listed, right-click it and select **Add Device**. If it is not listed, right-click **Network Devices** and select **Find Network NI-DAQmx Devices**. Select a device or manually enter the hostname or IP address. Click the troubleshooting link for help.

2.1.1.3 How to install the software


How to install the software

This software package runs on Microsoft Windows 95, 98, NT 4.0, 2000, and XP.


Software Installation

If you purchased this system with a computer, the software will already be installed. Otherwise, install the software using the following steps if the install program does not start automatically:

1. A CD-ROM containing the HanseVIEW software is supplied with your system. Run the program "R:\Software\HanseVIEW_Installer.msi on the CD-ROM (where R: is the drive letter for your CD-ROM drive).
2. The install program will prompt for the location to install the program. Click the "Next >" button in each dialog box to accept the default values. When installation is complete, click the "Finish" button.
3. Start HanseVIEW
4. Use menu 'Configuration .. Parameters' to setup the IO Hardware and PID Loop controller.

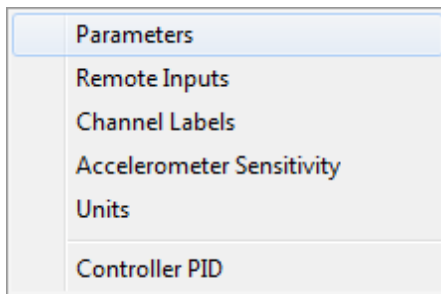

5. The Spectrum Hardware will be listed as the first item under Spectrum Hardware. The Spectrum Hardware must be blank if the Analysis package is not included in the software.

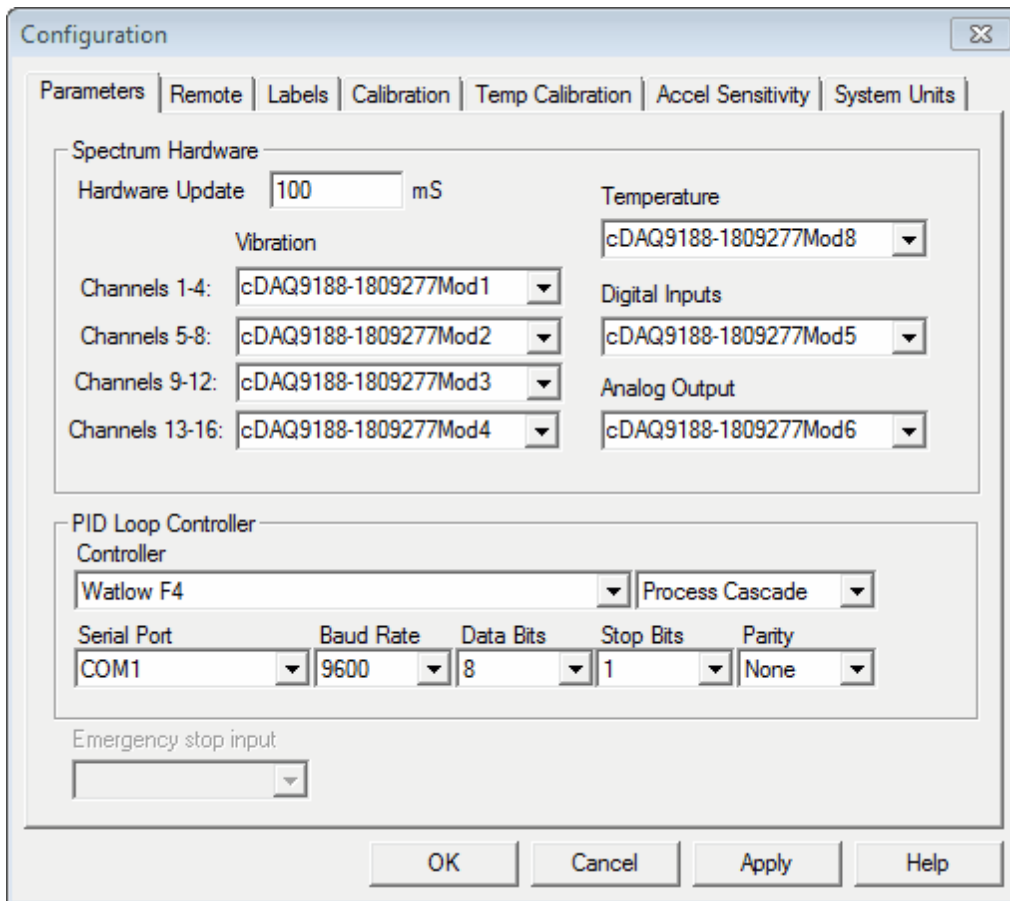

6. The PID Loop controller supports several devices. The most commonly used device is the WatlowF4. The WatlowF4 configuration is shown above.

2.1.2 How to set the accelerometer calibration

How to set the accelerometer calibration

The calibrated mV/g settings for your accelerometers are entered by selecting the Configuration.. Accelerometer Sensitivity menu command. For each channel, enter the calibration factor (in mV/g) for the accelerometer in use on that channel. This calibration factor is normally stamped on the accel or supplied on an accel calibration sheet. You may also (optionally) enter a serial number and a calibration

date for each accelerometer to aid in tracing the current calibration settings.

When the appropriate values are entered, click the "OK" button. The new accelerometer sensitivity factors will take effect immediately.

2.1.3 How to calibrate the system

How to Calibrate the system

Note: *If you just received your system from Vibration Research this calibration does not need to be done until the due date on the Calibration Certificate in the back cover of the manual.*

This calibration procedure should be performed annually.

1. Connect a power cord to the VibrationVIEW I/O unit.
2. Connect 2 coaxial cables together with a T-connectors.
3. Connect one end of the cable to a shorting plug.
4. Connect the other end of the cable to the Digital Volt Meter (DVM).
5. Connect the T-Connector to Input#1 on the IOtech Box.
6. Turn the unit on, and allow 1 hour for the temperature to stabilize before performing calibration.
7. Run HanseVIEW.
8. Set up new test with all channels active, and only channel 1 selected for control.
9. Select the Configuration..Parameters menu command.
10. Click the Calibration tab.
11. Connect one end of the cable to a shorting plug.
12. Connect the T-Connector to Input#1 on the IOtech Box.
13. Verify DVM reads 0.000VDC.
14. Click the "AZ" (auto-zero) button to set the input offset value for channel 1.
15. Repeat steps 12-14 for each additional channel
16. Click the "Apply" button. If a password is required use "Control". (Case Sensitive).
17. Remove Shorting plug from opposite end of coaxial cable, and plug Function Generator in its place.
18. Set the Function Generator to output Sine waveform at 1000Hz at 1.000Vrms. Verify Frequency and Amplitude with DVM. (+/- 20Hz, +/-0.001 Vrms)
19. Set DVM to display DC voltage. Adjust Function Generator DC offset until DVM reads 0mVDC (+/-5mV).
20. Set DVM to display AC voltage. Verify amplitude 1.000vRMS (+/-0.5 mV).
21. Connect the T-Connector to Input#1 on the IOtech Box.
22. Press "AG" (auto-gain) button to set input gain value for channel 1.
23. repeat steps 21-22 for each additional channel
24. Click the "Apply" button. If a password is required use "Control". (Case Sensitive).

Optional Output Calibration (Not Required if Output Channel is not used)

25. Connect one end of the cable to a shorting plug.
26. Connect the T-Connector to Input#1 on the IOtech Box.
27. Set **Output Channels** channel 1 Gain Multiplier=1.00
28. Connect the DVM to the HanseVIEW Output#1 (pins 7(ref) & 9(+VDC) on the 37Pin Connector on the IOtech Box.
29. Enter Voltage read on the DVM (DC mV) into the **Output Channels** Offset Box for channel 1.
30. Remove Shorting plug from opposite end of coaxial cable, and plug Function Generator in its place.

31. Set the Function Generator to output Sine waveform at 1000Hz at 1.000Vrms. Verify Frequency and Amplitude with DVM. (+/- 20Hz, +/-0.001 Vrms)
 32. Set DVM to display DC voltage. Adjust Function Generator DC offset until DVM reads 0mVDC (+/-5mV).
 33. Set DVM to display AC voltage. Verify amplitude 1.000vRMS (+/-0.5 mV).
 34. Connect the T-Connector to Input#1 on the IOTech Box.
 35. Connect the DVM to the HanseVIEW Output#1 (pins 7(ref) & 9(+VDC) on the 37Pin Connector on the IOTech Box.
 36. Enter Voltage read on the DVM (DC mV) into the **Output Channels** Gain Multiplier Box for channel 1.
 37. Click the "Apply" button. If a password is required use "Control". (Case Sensitive).
- Calibration is now complete.

2.1.4 How to enter tests

How to enter tests

1) Start a New Profile



"Easy New Test" on the Toolbar

2) Enter a Sequence

	T(°C)	V(Grms)	H(G)	Start Time	
1	25.0	0.0	50.0	at 00:00:00	a starting temperature, and optional vibration and humidity
Action	T(°C) V(Grms) H(G)				a target temperature and vibration. Use Normal Step Action to Ramp to Temperature
NORM	to 100.0	0.0	50.0		a Duration Time for the First Step
Duration	T(°C) V(Grms)				
00:01:30	50.00				
2	100.0	0.0	50.0	at 00:30:00	G SOAK
	to 100.0	0.0	50.0	for 00:30:00	
					a temperature soak step on the second line
3	100.0	0.0	50.0	at 01:00:00	NORM
	to 100.0	10.0	50.0	for 00:00:10	60.00
					Vibration Ramp to 10 G's over 10 Seconds
4	100.0	10.0	50.0	at 01:00:10	NORM
	to 100.0	10.0	50.0	for 00:05:00	
					a 5 minute vibration step
5	100.0	10.0	50.0	at 01:05:10	NORM
	to 100.0	0.0	50.0	for 00:00:30	20.00
					Vibration back down
6	100.0	0.0	50.0	at 01:05:40	NORM
	to 25.0	0.0	50.0	for 00:00:30	150.00
					Temperature back down

Sequence will now look like this:

	T(°C)	V(Gms)	H(G)	Start Time	Action		T(°C)	V(Gms)	H(G)	Duration	T(°C) /Min	V(Gms) /Min
1	25.0	0.0	50.0	at 00:00:00	NORM ▼	to	100.0	0.0	50.0	for 00:01:30	50.00	
2	100.0	0.0	50.0	at 00:01:30	G.SOAK ▼	to	100.0	0.0	40.0	for 00:30:00		
» 3	100.0	0.0	40.0	at 00:31:30	NORM ▼	to	100.0	10.0	40.0	for 00:00:30		20.00
4	100.0	10.0	40.0	at 00:32:00	NORM ▼	to	100.0	10.0	40.0	for 00:10:00		
5	100.0	10.0	40.0	at 00:42:00	NORM ▼	to	100.0	0.0	40.0	for 00:00:30		20.00
6	100.0	0.0	40.0	at 00:42:30	NORM ▼	to	25.0	0.0	40.0	for 00:02:00	37.50	
7	25.0	0.0	40.0	at 00:44:30	▼	to				for		

Insert

Delete

click the Next > button when complete

3) Define the outputs:

Step	Action
1	00:00:00 TO 00:01:30 25°C TO 100°C 0G TO 0G
2	00:01:30 TO 00:31:30 100°C TO 100°C 0G TO 0G
3	00:31:30 TO 00:32:00 100°C TO 100°C 0G TO 10G
4	00:32:00 TO 00:42:00 100°C TO 100°C 10G TO 10G
5	00:42:00 TO 00:42:30 100°C TO 100°C 10G TO 0G
» 6	00:42:30 TO 00:44:30 100°C TO 25°C 0G TO 0G

Discrete Outputs

Heat	Cool	Vib	Aux4	Aux5	Aux6	Aux7	Aux8
Heat	Cool	Vib	Aux4	Aux5	Aux6	Aux7	Aux8
Heat	Cool	Vib	Aux4	Aux5	Aux6	Aux7	Aux8
Heat	Cool	Vib	Aux4	Aux5	Aux6	Aux7	Aux8
Heat	Cool	Vib	Aux4	Aux5	Aux6	Aux7	Aux8
Heat	Cool	Vib	Aux4	Aux5	Aux6	Aux7	Aux8

Your required outputs will vary depending on the configuration of the chamber.

This example shows a dedicated output to run vibration turned on for each step with vibration.

click the Next > button when complete

3) Optional PID reassignment

Step Action	Select PID	PID #1	PID #2
» 1 00:00:00 TO 00:01:30 25°C TO 100°C 0G TO 0G	<input type="text" value="DEFAULT"/>	Proportional <input type="text" value="5"/>	Proportional <input type="text" value="5"/>
2 00:01:30 TO 00:31:30 100°C TO 100°C 0G TO 0G	<input type="text" value="DEFAULT"/>	Integral <input type="text" value="0"/>	Integral <input type="text" value="0"/>
3 00:31:30 TO 00:32:00 100°C TO 100°C 0G TO 10G	<input type="text" value="DEFAULT"/>	Derivative <input type="text" value="0"/>	Derivative <input type="text" value="0"/>
4 00:32:00 TO 00:42:00 100°C TO 100°C 10G TO 10G	<input type="text" value="DEFAULT"/>	PID #3	PID #4
5 00:42:00 TO 00:42:30 100°C TO 100°C 10G TO 0G	<input type="text" value="DEFAULT"/>	Proportional <input type="text" value="5"/>	Proportional <input type="text" value="5"/>
6 00:42:30 TO 00:44:30 100°C TO 25°C 0G TO 0G	<input type="text" value="DEFAULT"/>	Integral <input type="text" value="0"/>	Integral <input type="text" value="0"/>
		Derivative <input type="text" value="0"/>	Derivative <input type="text" value="0"/>

Default PID settings will not change PID during any steps

click the button when complete

4) Optional Limits

Program Values:

Maximum Vibration	<input type="text" value="9999.9"/>	G
Maximum Temperature	<input type="text" value="9999.9"/>	°C
Minimum Temperature	<input type="text" value="-9999.9"/>	°C
Maximum Humidity	<input type="text" value="100"/>	G

Default settings will disable test limits

click the button when complete

3) Define the parameters:

<div>PSD</div> <div> Sample frequency <input type="text" value="25000"/> Number of Samples <input type="text" value="4096"/> PSD Sample Averaging (%) <input type="text" value="0"/> Minimum Vibration Frequency <input type="text" value="10"/> Maximum Vibration Frequency <input type="text" value="17500"/> </div>	<div>Temperature Controller</div> <div> Guar Soak -Window <input type="text" value="5"/> Guar Soak +Window <input type="text" value="5"/> Temperature Loop Mode <input type="text" value="Cascaded"/> </div>
<div>Fatigue</div> <div> Material Beta <input type="text" value="8"/> Calculate Fatigue Using <input type="text" value="Accel"/> </div>	<div>Sequence</div> <div> Times to repeat the sequence <input type="text" value="1"/> </div>

Suggested values are adequate for most tests.

click the  button when complete

4) Define the Spectrum Channels

Vibration Channels

1) <input checked="" type="checkbox"/>	X Axis	9) <input type="checkbox"/>	CH9
2) <input checked="" type="checkbox"/>	Y Axis	10) <input type="checkbox"/>	CH10
3) <input checked="" type="checkbox"/>	Z Axis	11) <input type="checkbox"/>	CH11
4) <input type="checkbox"/>	Ch4	12) <input type="checkbox"/>	CH12
5) <input type="checkbox"/>	Ch5	13) <input type="checkbox"/>	CH13
6) <input type="checkbox"/>	Ch6	14) <input type="checkbox"/>	CH14
7) <input type="checkbox"/>	Ch7	15) <input type="checkbox"/>	CH15
8) <input type="checkbox"/>	Ch8	16) <input type="checkbox"/>	CH16

Control From Vibration Channels

<input checked="" type="checkbox"/> Channel 1	<input type="checkbox"/> Channel 5	<input type="checkbox"/> Channel 9	<input type="checkbox"/> Channel 13
<input checked="" type="checkbox"/> Channel 2	<input type="checkbox"/> Channel 6	<input type="checkbox"/> Channel 10	<input type="checkbox"/> Channel 14
<input checked="" type="checkbox"/> Channel 3	<input type="checkbox"/> Channel 7	<input type="checkbox"/> Channel 11	<input type="checkbox"/> Channel 15
<input type="checkbox"/> Channel 4	<input type="checkbox"/> Channel 8	<input type="checkbox"/> Channel 12	<input type="checkbox"/> Channel 16

Channel 1 shown defined for X Axis.

Channel 2 shown defined for Y Axis.

Channel 3 shown defined for Z Axis.

Channel 4,5,6,7,8 shown disabled.

Control Output uses average of X,Y, and Z Axis

click the  button when complete

4) Define Temperature Channels

Temperature Channels


1) <input checked="" type="checkbox"/>	Product	9) <input type="checkbox"/>	CH9
2) <input checked="" type="checkbox"/>	Air	10) <input type="checkbox"/>	CH10
3) <input type="checkbox"/>	Ch3	11) <input type="checkbox"/>	CH11
4) <input type="checkbox"/>	Ch4	12) <input type="checkbox"/>	CH12
5) <input type="checkbox"/>	Ch5	13) <input type="checkbox"/>	CH13
6) <input type="checkbox"/>	Ch6	14) <input type="checkbox"/>	CH14
7) <input type="checkbox"/>	Ch7	15) <input type="checkbox"/>	CH15
8) <input type="checkbox"/>	Ch8	16) <input type="checkbox"/>	CH16

Thermocouple Type


TypeT


Temperature channels may be renamed.

If optional 14 Channel Thermocouple input is included, the channels may be selected for data collection, and the thermocouple for these monitor channels may be changed

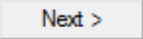
click the  button when complete

5) Define Data Storage

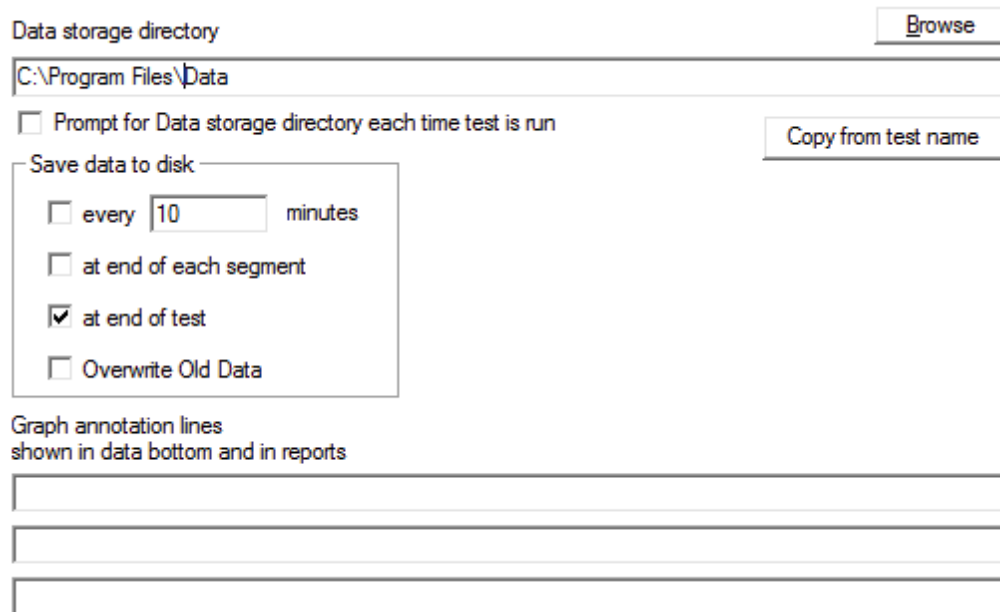

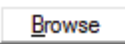Data storage directory 

C:\Program Files\Data

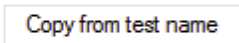☐ Prompt for Data storage directory each time test is run 

Save data to disk


☐ every 10 minutes

☐ at end of each segment


☒ at end of test


☐ Overwrite Old Data

Graph annotation lines
shown in data bottom and in reports

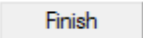click the  button when complete

6) Retain test as a new file

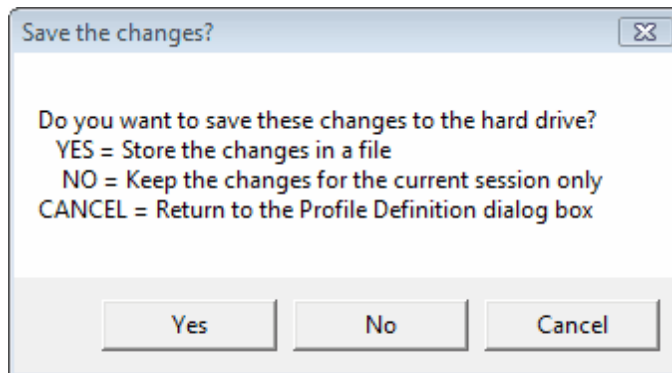

Save the changes? 

Do you want to save these changes to the hard drive?

YES = Store the changes in a file

NO = Keep the changes for the current session only

CANCEL = Return to the Profile Definition dialog box

Yes No Cancel

Select Yes to retain this test for future use. Enter a new test name when prompted.

2.1.5 How to run tests

How to run a Repetitive Shock test

To run a Repetitive Shock test select the Test..Open Test menu command or click the "Open test" toolbar button. A list of test names is displayed. Select Files of type "HanseVIEW Chamber Profiles (*.vcp)" and select the test you wish to run. Click the "Open" button to load that test.

To run the test, click the "Run" button in the Chamber Control Center. To stop the test, click the "Stop" button.

2.1.6 How to display and print graphs

How to display and print graphs

The graphs for HanseVIEW are where the majority of the test actions are observed. To display a graph, select the File..New Graph menu command or click the "New Graph toolbar" button. A dialog box appropriate for the current test will appear. See the appropriate section for specifics on the available graph types:

- Repetitive Shock Settings dialog box

Several keyboard and mouse shortcuts are available to manipulate the graph display:

- Ctrl-G to edit the graph settings
- Ctrl-A to autoscale the vertical (Y) axis
- Ctrl-F to autoscale both the vertical and horizontal axes
- Ctrl-D to toggle the cursor display
- F8 to insert an annotation
- F7 to remove an annotation (click on the annotation text with the left mouse and then press F7)
- F4 to move an annotation (click on the annotation text with the left mouse, press F4, move the annotation to the new location, and click the left mouse button to select the new position)
- Click and hold down the right mouse button, move the mouse to draw a rectangle, and release the mouse button to zoom in on an area of the graph.
- Double-click the right mouse button to zoom out to show all of the data

Using the Clipboard

While a graph is displayed, it can be copied to the Windows Clipboard by clicking on the graph with the mouse, and then selecting the File..Copy Graph menu command, clicking the "Copy Graph" toolbar button, or by pressing Ctrl+C. After copying the graph to the clipboard, switch to the application into which you want to paste the graph image, and use that application's Edit..Paste menu command. You can then resize it to meet your needs. The Edit..Paste command will only work in applications that are able to use metafile graphics (e.g. Microsoft Word).

Windows also allows you to copy the active dialog box or the entire screen to the clipboard:

- To copy just the active window or dialog box, hold down the "Alt" key and press the "Print Scrn" key (usually found above the numeric keypad).
- To copy the entire screen to the clipboard, press the "Print Scrn" key by itself.

Then go to the desired application, and use that application's Edit..Paste menu command to insert the copied image.

Using the Printer

To print a graph, select the graph by clicking on it with your mouse, and then by selecting the File..Print Active Graph menu command or clicking the "Print Graph" toolbar button. A dialog box will appear prompting you for the printer to which to print the graph. Select an appropriate printer, and click the "OK" button. The graph will then be printed to the selected printer.

You can also select the File..Printer Setup menu command or the File..Print Options menu command to modify your printer parameters.

Laser printers that only print in black and white will produce the best graph output if you select BLACK AND WHITE mode rather than COLOR mode when creating a new graph. To change a graph from color to black-and-white, edit the graph settings by selecting the Graph..Edit Graph Settings menu command or clicking the "Edit Graph" toolbar button, change the style from "Color" to "Black and White" and clicking the "OK" button.

2.1.7 How to store and retrieve data

How to store and retrieve data

How to store Data

To store the data for the current test, select the File..Save Data menu command or click the "Save Current Data" toolbar button. A dialog box will appear prompting you for a file name into which to store the data. When the "Save" button is clicked all parameters for the current test will be saved to the hard drive.

The default directory for saving data is set in the test specification. Select the Test..Edit Test menu command, and then click the Data Storage tab to define the default data directory for the current test.

The default file name has the form "Aug25-1617-0001" where "Aug25" indicates the date and "1617" indicates the time the test was started (i.e. August 25 at 4:17 pm). 0001 is an index value that is incremented every time a file is saved while the test is running. Therefore, for a test begun at 4:17 pm on August 25, the default names for the data files will be "Aug25-1617-0001", "Aug25-1617-0002", "Aug25-1617-0003", etc. Automatic data storage will always use this sequence of file names. When you manually store the data (using the File..Save Data menu command) you may change the file name to anything you desire before clicking on the "Save" button.

How to View Stored Data

To view stored data, select the File..Open Data menu command or click the "Open Stored Data" toolbar button. A dialog box will appear prompting you for the name of the file you wish to view. Select the desired file, and click the "OK" button. A graph with the stored data will be displayed. Select the Graph..Edit Graph Settings menu command (or press Ctrl-G) to change the traces and/or type of the graph.

Hint: While a stored graph is displayed, you can use the *left and right arrow keys* to scan backwards and forwards in time through all of the data files stored in the same directory as the currently displayed file. Using this feature you can quickly scan through many stored data sets.

To create a formatted report of the data displayed in the current graph, select the File..Create Report menu command.

2.1.8 How to convert tests created using the version 1.x software

How to convert tests created using the version 1.x software

Select the File..Read Old File Formats..Test Profiles menu command to bring up a File Open dialog box. Select the test file from those listed in the dialog box. Click the "Open" button and the test will be loaded.

If a test of the same name with the new format is not present, the converted test will be automatically saved to the same directory with the same file name, but with the new file format's extension. The old format test will not be changed by the version 2.x software, so it can still be used with the old software.

To ensure that the converted test is saved, and to change the name and directory into which it is stored,

select the Test..Edit Test menu command to open up the edit test dialog box, and click the "Save As..." button to select a directory and filename into which to save the test.

2.1.9 How to create customized reports

How to create customized reports

Reports are generated using mail merge type processing. The program reads in a template file, substitutes data values and graphs in place of keywords, and writes the resulting data to an output file. The template files can be either plain text or Rich Text Format files. Plain text files can have data values but no graphs. Rich Text Format files (using extension .rtf) can contain data values and graphs, as well as any text formatting and other graphics elements that can be inserted into an RTF file.

The default templates are stored in subdirectories of the directory c:\Program Files\HanseVIEW\Templates.

See Also
Report Fields, Report Graphs

2.1.10 How to enable a status output on a serial port

HanseVIEW can be configure to output a status message on a com port.

To enable, add the following section to the Chamber.ini file

```
[StatusCom]
Comm Port=5
BaudRate=9600
ByteSize=8
Parity=None
StopBits=1
Status Message=[PARAM:Time];[PARAM:StopCode];[PARAM:Ch1Temp];[PARAM:Ch2Vib]
```

Comm Port, BaudRate, ByteSize, Parity, and StopBits are the serial port setting and must match the receiving device.

The status message line is read and parsed once a second. The result is written to the serial port. The Status Message line can contain any text as well as Report Parameters

Example output would be:

Mar 31, 2011 07:44:26;Running Test;44.5953°C;4.0215G

2.1.11 Report parameter names

Report parameter names

Stop code:	[PARAM:StopCode]
Profile name:	[PARAM:Testname]
Sample Frequency:	[PARAM:SampleFrequency]
Repeats:	[PARAM:Repeats]
Annotation line 1:	[PARAM:Note1]
Annotation line 2:	[PARAM:Note2]

Annotation line 3:	[PARAM:Note3]
Data directory:	[PARAM:DataDirectory]
Data storage settings:	[PARAM:DataStorage]
Segment table:	[PARAM:SegmentTable]
Start time:	[PARAM:StartTime]
Current time:	[PARAM:Time]
Elapsed Time:	[PARAM:ElapsedTime]
Remaining:	[PARAM:Remaining]
Channel vibration:	[PARAM:Ch1Vib]
	[PARAM:Ch2Vib]
	[PARAM:Ch3Vib]
	[PARAM:Ch4Vib]
	[PARAM:Ch5Vib]
	[PARAM:Ch6Vib]
	[PARAM:Ch7Vib]
	[PARAM:Ch8Vib]
Channel fatigue:	[PARAM:Ch1Fat]
	[PARAM:Ch2Fat]
	[PARAM:Ch3Fat]
	[PARAM:Ch4Fat]
	[PARAM:Ch5Fat]
	[PARAM:Ch6Fat]
	[PARAM:Ch7Fat]
	[PARAM:Ch8Fat]
Chan Accum fatigue:	[PARAM:Ch1AFa]
	[PARAM:Ch2AFa]
	[PARAM:Ch3AFa]
	[PARAM:Ch4AFa]
	[PARAM:Ch5AFa]
	[PARAM:Ch6AFa]
	[PARAM:Ch7AFa]
	[PARAM:Ch8AFa]
Channel humidity:	[PARAM:Ch1Hum]
Product temperature:	[PARAM:Ch1Temp]
Air temperature	[PARAM:Ch2Temp]
Vibration Label	[PARAM:La1Vib]
	[PARAM:La2Vib]
	[PARAM:La3Vib]
	[PARAM:La4Vib]
	[PARAM:La5Vib]
	[PARAM:La6Vib]
	[PARAM:La7Vib]
	[PARAM:La8Vib]
Humidity Label:	[PARAM:La1Hum]
Temperature Label:	[PARAM:La1Temp]
	[PARAM:La2Temp]
Calibration data	[PARAM:Cal1]
	[PARAM:Cal2]
	[PARAM:Cal3]
	[PARAM:Cal4]
	[PARAM:Cal5]
	[PARAM:Cal6]
	[PARAM:Cal7]
	[PARAM:Cal8]
Vibration units:	[PARAM:UnitVibration]
Density units	[PARAM:UnitDensity]

Humidity units:	[PARAM:UnitHumidity]
Temperature units:	[PARAM:UnitTemperature]
Velocity units:	[PARAM:UnitVel]
Displacement units:	[PARAM: UnitDisplacement]

2.1.12 Report graph types

Report graph types

Graph types for Repetitive reports may be one of the following:

[GRAPH:Temp]	Temperature vs Time
[GRAPH:Vib]	Vibration rms Amplitude vs Time
[GRAPH:Fatigue]	Fatigue rate vs. Time
[GRAPH:PSD]	Power Spectral Density
[GRAPH:Sigma]	Rate vs Amplitude
[GRAPH:Time]	Accel waveform
[GRAPH:Vel]	Velocity waveform

Flags that may be applied to enable traces:

Ch1	Channel 1
Ch2	Channel 2
Ch3	Channel 3
Ch4	Channel 4
Ch5	Channel 5
Ch6	Channel 6
Ch7	Channel 7
Ch8	Channel 8
Con	SetPoint
Dem	Process Variable


Flags that may be applied to set the formatting of the graph:

W150	Select graph width, in mm (default is 150)
H100	Select graph height, in mm (default is 100)
LogX	Use a logarithmic horizontal axis (default is linear)
LogY	Use a logarithmic vertical axis (default is linear)
BW	Create a black-and-white plot (default is color)
XMin0	Set the minimum X axis value
XMax1000	Set the maximum X axis value
YMin-10	Set the minimum Y axis value
YMax10	Set the maximum Y axis value

Example:

[GRAPH:PSD,Ch1,Ch2,LogX,LogY,BW]

Part

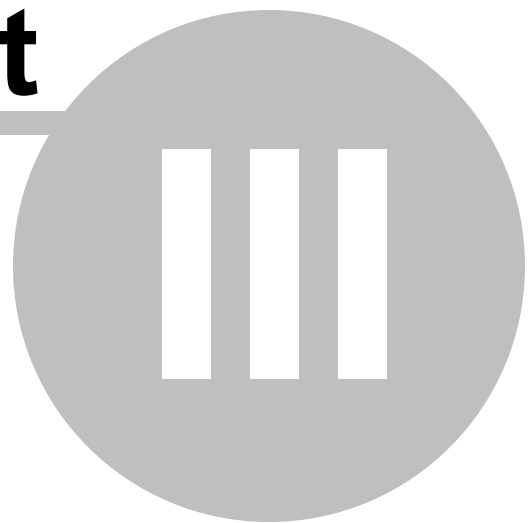

3 Menu Commands

3.1 File menu

3.1.1 File menu commands

File menu commands

The file menu is used for loading, saving, copying, and printing data files and graphs. It offers the following commands:

New Graph	a new graph.
Copy Graph	the selected graph to the windows clipboard.
Save as .. Data File	the active data set to the disk.
Save as .. Meta File	the selected graph in emf format
Save as .. Text File	the active data set to the disk as Text file.
Save as .. Matlab File	the active data set to the disk as <i>MatLab</i> file.
Save as .. Bitmap File	the selected graph in bmp format.
Save as .. PNG File	the selected graph in Portable Network Graphics format.
Open Data	a stored data file from the disk.
Previous Data	the previous data file from the disk.
Next Data	the next data file from the disk.
Close	an opened graph.
Read Old File Formats.. Profiles	test profiles created with version 1.x software.
Read Old File Formats .. Data	test Data created with version 1.x software.
Create Report	a saved report using a defined template
Print Report	a printed report using a defined template
Print Active Graph	the selected graph.
Printer Setup	a printer and printer connection.
Print Options	the graph scaling options used for printing.
Exit	

3.1.2 New Graph command (File menu)

New Graph command (File menu)

Use this command to create a new graph in HanseVIEW. A dialog box will prompt you with the types of graphs available.

For more information on the graph dialogs and graph types for the various tests, see:

Repetitive Shock Graph Settings dialog box

Shortcuts

Toolbar:

Keys:



Ctrl+N

3.1.3 Copy Graph command (File menu)

Copy Graph command (File menu)

Use this command to copy the selected graph onto the clipboard. Once on the clipboard, it may be pasted into another application, such as a word processor, using that program's Paste command.

Copying data to the clipboard replaces the contents previously stored there.

Shortcuts

Toolbar:



GRAPH

Keys:

Ctrl+C

3.1.4 Save as .. Data File (File menu)

Save as .. Data File command (File menu)

Use this command to store the data to a file that may then be loaded back into HanseVIEW using the File..Open Data menu command for viewing and printing. This command will bring up a Save As... dialog box with a default file name derived from the date and time the test began and an index that is incremented every time a data set is stored. The file name may be changed if you so desire. Click on the "Save" button to save the data to a file.

Note: The live data stored in the file is that data that is displayed when the "Save" button is pressed in the Save As... dialog box. If you want to save a particular set of data (for example, a transient occurrence in an FDR playback file), click the "Save" button as soon as you see the data you want to save appear in the graphs. This data may then be loaded again for analysis. In this way, the Save Data menu command may be used as a form of freeze-frame for the live data.

Shortcuts

Toolbar:



DATA

Keys:

Ctrl+S

3.1.5 Save As .. Meta File (File Menu)

Save As .. Meta File command (File Menu)

Use this command to save the currently selected graph to a file using the Meta File (emf) format. Graphs saved in this form may then be imported into another application, such as a word processor, but HanseVIEW cannot read these files, nor can the graph scales be changed.

Select the File..Save Data menu command to save the raw data for later loading and viewing in HanseVIEW, with full control over the scaling and format of the graphs.

Select the File..Copy Graph menu command to copy the graph image to the windows clipboard such that it can be directly pasted into another application.

3.1.6 Save as .. Text File (File menu)

Save As .. Text File command (File Menu)

Use this command to save the currently selected graph to a file using the Text File (txt) format. Data saved in this form may then be imported into another application, such as a word processor or

spreadsheet, but HanseVIEW cannot read these files.

Select the File..Save Data menu command to save the raw data for later loading and viewing in HanseVIEW, with full control over the scaling and format of the graphs.

3.1.7 Save as .. Matlab File (File Menu)

Save As .. *MatLab* File command (File Menu)

Use this command to save the currently selected graph to a file using the *MatLab* File (mat) format. Data saved in this form may then be imported into another application, such as *MatLab*, but HanseVIEW cannot read these files.

Select the File..Save Data menu command to save the raw data for later loading and viewing in HanseVIEW, with full control over the scaling and format of the graphs.

3.1.8 Save as .. Bitmap File (File menu)

Save as .. Bitmap File command (File menu)

Use this command to save the currently selected graph to a file using the Bitmap File (bmp) format. Graphs saved in this form may then be imported into another application, such as a word processor, but HanseVIEW cannot read these files, nor can the graph scales be changed.

Select the File..Save Data menu command to save the raw data for later loading and viewing in HanseVIEW, with full control over the scaling and format of the graphs.

Select the File..Copy Graph menu command to copy the graph image to the windows clipboard such that it can be directly pasted into another application.

3.1.9 Save as .. PNG File (File Menu)

Save as .. PNG File command (File menu)

Use this command to save the currently selected graph to a file using the vector graphic (png) format. Graphs saved in this form may then be imported into another application, such as a word processor, but HanseVIEW cannot read these files, nor can the graph scales be changed.

Select the File..Save Data menu command to save the raw data for later loading and viewing in HanseVIEW, with full control over the scaling and format of the graphs.

Select the File..Copy Graph menu command to copy the graph image to the windows clipboard such that it can be directly pasted into another application.

3.1.10 Open Data comand (File menu)

Open Data command (File menu)

Use this command to read a data set previously saved in HanseVIEW using the File..Save Data menu command. An Open File dialog box will be displayed, allowing selection of the data set you wish to view. Use the Window menu to switch among the multiple open documents. See the Window 1, 2,.. menu command.

Shortcuts

Toolbar:



Keys:

Ctrl+O

3.1.11 Previous Data command (File menu)

Previous Data command (File menu)

Use this command to read and plot the data file stored in the same directory as the current file, but stored immediately prior to the current file. This command is available only when a graph of a stored data file is the currently selected graph type.

This command, along with the Next Data menu command, is useful for quickly scanning through a set of data files in a directory in chronological order.

Shortcuts

Keys:	Left arrow
	Down arrow
	Keypad Minus (-)

Hint: To see multiple types of graphs of each data file, select the Window..New menu command and the Window..Tile menu command to create and arrange multiple graphs before using this command to scan through the files.

3.1.12 Next Data command (File menu)

Next Data command (File menu)

Use this command to read and plot the data file stored in the same directory as the current file, but stored immediately after the current file. This command is only available when a graph of a stored data file is the currently selected graph type.

This command, along with the Previous Data menu command, is useful for quickly scanning through a set of data files in a directory in chronological order.

Shortcuts

Keys:	Right arrow
	Up arrow
	Keypad Plus (+)

Hint: To see multiple types of graphs of each data file, select the Window..New menu command and the Window..Tile menu command to create and arrange multiple graphs before using this command to scan through the files.

3.1.13 Read Old File Formats..Profiles command (File menu)

Read Old File Formats .. Test Profiles command (File menu)

Use this command to read test profiles created using version 1.x of HanseVIEW. An Open File dialog box will be displayed, allowing selection of the test to load.

If the test has not previously been converted to the format used in version 2.x of HanseVIEW, a new file will be created with the same base file name, but with the filename extension changed according to the following table:

This command will not change the version 1.x format file, so that file may still be used with the older software. Also, this command will not overwrite any files. To force HanseVIEW to overwrite a test file, load the file into HanseVIEW, then use the Test..Edit Test menu command to edit the test and click the "Save As..." button in the Edit Test dialog box.

3.1.14 Read Old File Formats..Data command (File menu)

Read Old File Formats .. Data command (File menu)

Use this command to read data sets created using version 1.x of the HanseVIEW software. An Open File dialog box will be presented, allowing selection of the data set to read.

3.1.15 Create Report Command (File Menu)

Create Report Command (File Menu)

This command will create a document with a variety of useful information and graphs. The information saved depends on the template that you choose.

To create a report select the File..Create Report menu command, choose a template, decide where to store the report and under what name, and click the "OK" button.

See also: How to create customized reports

3.1.16 Print Report Command (File Menu)

Print Report Command (File Menu)

This command will create a report using the same templates that the Create Report Command uses but instead of storing it, the report will be printed on the default printer.

To print a report, select the File..Print Report menu command, choose a template and click the "OK" button.

See also: How to create customized reports

3.1.17 Print Active Graph Command (File menu)

Print Active Graph command (File menu)

Use this command to print a graph to the printer. A printer selection dialog box (see Printer Setup for a description of this dialog) will be presented, allowing selection of the printer and layout options. See also the Printer Setup and the Print Options menu commands. The function key <F12> can also be used to create a screen dump on the printer

Shortcuts

Toolbar:
Keys:




Ctrl+P, <F12>

3.1.18 Printer Setup ... command (File menu)

Printer Setup..command (File menu)

The following options allow you to select destination printer and its connection. Changes made using this command will be used as the default settings for all subsequent Print commands.

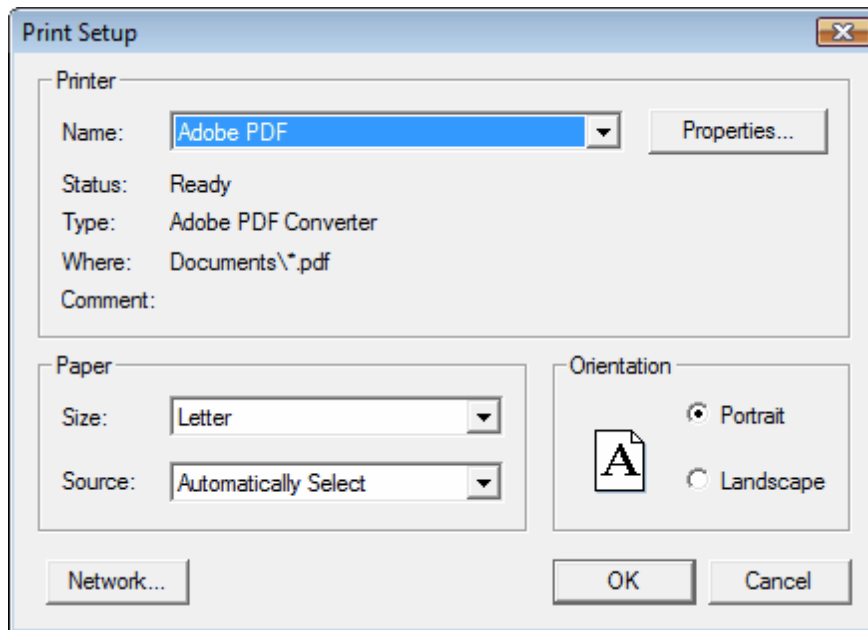**Name**

Select the printer you want to use. Select the Default Printer; or select the Specific Printer option and select one of the current installed printers shown in the dialog box. You can install printers and configure ports using the Windows Control Panel.

Properties

Displays a dialog box where you can make additional choices about printing, specific to the type of printer you have selected.

Paper Size

Select the size of the paper on which the document is to be printed.

Paper Source

Some printers offer multiple trays for different paper sources. Specify the tray here.


Orientation

Select Portrait or Landscape.

3.1.19 Print Options command (File menu)

Print Options command (File menu)

This command brings up the Print Parameters dialog box that may be used to change the way graphs are printed.

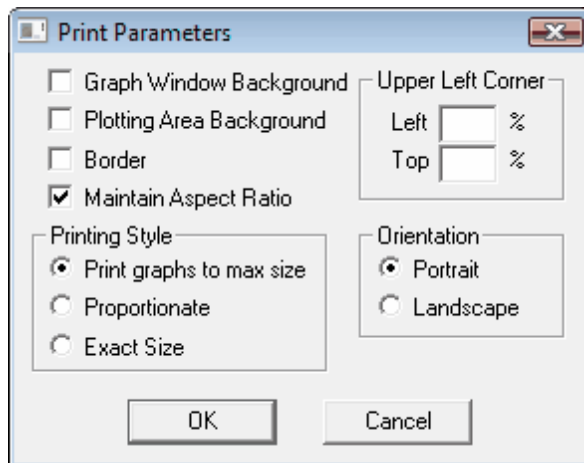

The following settings may be made:

Graph Window Background

If this box is checked, the background color of a graph is printed otherwise it is ignored. By default this box is not checked.

Plotting Area Background

If this box is checked, the background color of a graph's plotting area is printed otherwise it is ignored. By default this box is not checked.

Border

If this box is checked, a graph is printed with a rectangular border around it. By default this box is not checked.

Maintain Aspect Ratio

If this box is checked, the aspect ratio is maintained when printing with Print graphs to max size and Proportionate printing styles. Otherwise the graph is mapped to the full printed page, and the aspect ratio may change. By default this box is checked.

Upper Left Corner

X- and Y-position of the left-upper corner of the page relative to the paper sheet width. A Left value of 0.0 indicates that the page will be printed starting at the left side of the paper sheet. A Top value of 0.0 indicates that the page will be printed starting at the left side of the paper sheet. This parameter is only used if the Exact Size printing style is selected.

Print graphs to max size

Proportionate

(These two options are equivalent for graphs printed by HanseVIEW.)

Print the graphs with the maximal size that a paper sheet allows. These options will scale the text and symbols so that their size relative to other objects remains constant.

Exact Size

Printed graphs will maintain their original sizes. Only this option guarantees that text and symbols will be printed with their specified size.

3.1.20 Explorer command (File menu)

Explorer command (File Menu)

This command will open a Windows Explorer window to allow you to copy/move/rename files.

3.1.21 Exit (File Menu)

Exit command (File menu)

Use this command to end your HanseVIEW session. You can also use the Close command on the application system menu.

Shortcuts

Mouse:

Click the X in the upper right corner of the HanseVIEW window:



Or: Double-click the application's system menu.



Keys:

Alt+F4

3.2 Configuration menu

3.2.1 Configuration menu commands

Configuration menu commands

The configuration menu is used to set the characteristics and limits of the shaker system. It offers the following commands:

Parameters	System Configuration Parameters
Remote Inputs	Remote Input Options
Channel Labels	Channel and Loop Labels
System Calibration	System Calibration
Temperature Calibration	Optional Thermocouple calibration
Accelerometer Sensitivity	Accelerometer Sensitivity
Units	SI/ English/ User Units
Controller PID	PID settings for loop controller.

3.2.2 Parameters command (Configuration menu)

Parameters command (Configuration menu)

This command opens the Parameters tab on the HanseVIEW Configuration dialog box.

The Configuration dialog box features a tabbed interface with the following tabs: Parameters, Remote, Labels, Calibration, Temp Calibration, Accel Sensitivity, and System Units. The Parameters tab is currently active.

Spectrum Hardware

- Hardware Update: 100 mS
- Vibration:
 - Channels 1-4: cDAQ9188-1809277Mod1
 - Channels 5-8: cDAQ9188-1809277Mod2
 - Channels 9-12: cDAQ9188-1809277Mod3
 - Channels 13-16: cDAQ9188-1809277Mod4
- Temperature: cDAQ9188-1809277Mod8
- Digital Inputs: cDAQ9188-1809277Mod5
- Analog Output: cDAQ9188-1809277Mod6

PID Loop Controller

- Controller: Watlow F4
- Process Cascade: Process Cascade
- Serial Port: COM1
- Baud Rate: 9600
- Data Bits: 8
- Stop Bits: 1
- Parity: None

Emergency stop input

Buttons: OK, Cancel, Apply, Help

Use this dialog box to set global system parameters including the type of I/O hardware and the serial port used by the controller.

The emergency stop input is an optional feature (part of the Remote Input package).

See Also:


How to install the Hardware

How to install the software

3.2.3 Remote Inputs command (Configuration menu)

Remote Inputs command (Configuration menu)

This command opens the Remote tab on the HanseVIEW Configuration dialog box.

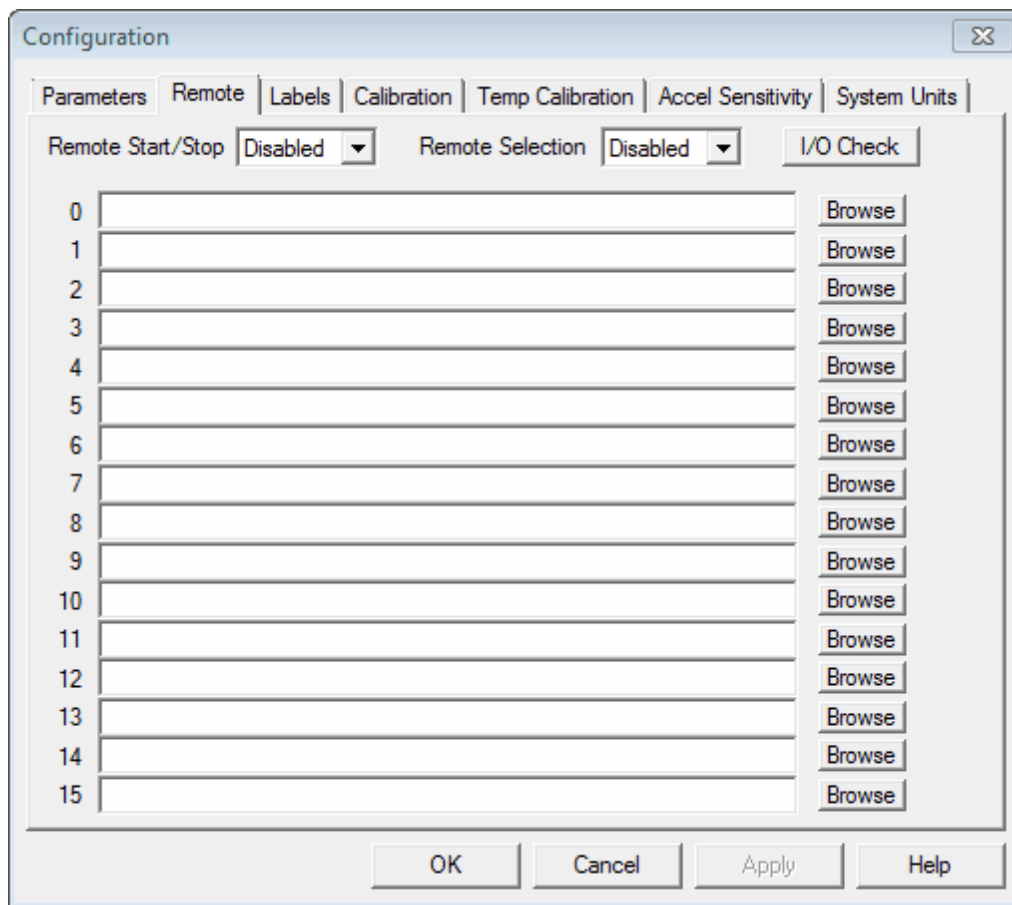

Use this dialog box to enable and configure the remote input option. This option requires DaqBoard/2000 or DaqLab hardware.

P2 Digital Port A, Bit 0: Emergency Stop Signal

The emergency stop input is an optional feature (part of the Remote Start package) that connects to P2 Port A bit 0 on the IO unit. When this input is high the outputs of the I/O unit are immediately brought to 0 volts to stop the drive signal going to the amplifier. Typically this input is connected to ground through a normally closed red mushroom button. When the mushroom button is pressed, the connection to ground is opened and bit 0 is pulled up to +5 in the IO unit. This causes the shaker drive signal to be immediately shut down.

To enable the Emergency Stop feature, select "Enabled" next to the *Remote Start/Stop* label of the above dialog (in the upper left corner of the dialog).

P2 Digital Port A, Bit 1: Remote Start/Stop Signal

The Remote Input options allow a remote TTL level input signal to start and stop the test. To use this feature, connect the remote input signal to P2 digital port A, bit 1 on the IO unit. Then enable remote input by selecting "Enabled" next to the *Remote Start/Stop* label of the above dialog (in the upper left corner of the dialog).

Once this feature has been enabled, the test may be started and stopped using a remote input. When the input signal to port A bit 1 makes a transition from +5 volts to 0 volts, the test will start. When the

input signal to port A bit 1 makes a transition from 0 volts to +5 volts, the test will stop.

You may also operate the remote input through a relay, using the relay to switch the port A bit 1 signal between +5V and ground.

P2 Digital Port A, Bits 2,3,4,5: Remote Test Selection

When *Remote Selection* is enabled in the above dialog box (upper right corner of the dialog), a test is automatically loaded when the remote input signal is used to start a test. This may be used to select different tests using remote electronics such as a PLC. Remote test selection is performed using P2 port A bits 2,3,4, and 5 according to the following table, where a 0 and 1 indicate TTL voltage levels of 0 volts and 5 volts, respectively. For each test number listed in the table below, there is a corresponding line in the Remote Input configuration dialog box configuring the name of the test to load.

<u>Bit 5</u>	<u>Bit 4</u>	<u>Bit 3</u>	<u>Bit 2</u>	<u>Test number</u>
1	1	1	1	0
1	1	1	0	1
1	1	0	1	2
1	1	0	0	3
1	0	1	1	4
1	0	1	0	5
1	0	0	1	6
1	0	0	0	7
0	1	1	1	8
0	1	1	0	9
0	1	0	1	10
0	1	0	0	11
0	0	1	1	12
0	0	1	0	13
0	0	0	1	14
0	0	0	0	15

I/O Check

The I/O Check button brings up dialog that shows the current state of the bits of P2 Digital Port A. There is a check box for each bit. If the checkbox is checked then the bit is high.

3.2.4 Configure Channel Labels

Channel Labels command (Configuration menu)

This command opens the Channel Label tab on the HanseVIEW Configuration dialog box.

The screenshot shows the 'Configuration' dialog box with the 'Labels' tab selected. The dialog has a title bar with a close button. Below the title bar are several tabs: 'Parameters', 'Remote', 'Labels', 'Calibration', 'Temp Calibration', 'Accel Sensitivity', and 'System Units'. The 'Labels' tab is active, displaying three columns of input fields:

Humidity Channels		Aux Channels		Loop Labels
1	Humidity	1	Aux1	1 Product
2	CH2	2	Aux2	2 Air
3	CH3	3	Aux3	3 Vibration
4	CH4	4	Aux4	4 Humidity
5	CH5	5	Aux5	
6	CH6	6	Aux6	
7	CH7	7	Aux7	
8	CH8	8	Aux8	
		9	Aux9	
		10	Aux10	
		11	Aux11	
		12	Aux12	
		13	Aux13	
		14	Aux14	
		15	Aux15	
		16	Aux16	

At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.

Default channel labels are defined for each channel. The current test must be saved to retain channel information changed from this menu. Any new tests will default to the labels entered into this dialog.

3.2.5 System Calibration command (Configuration menu)

System Calibration command (Configuration menu)

This command opens the Calibration tab on the HanseVIEW Configuration dialog box.

Enter the reading error into the offset box. For example if after installing a shunt across the input channel the channel reads 0.1Grms enter 10 into the offset box (assuming the accelerometer is 100mV/G and Gain Multiplier is set to 1.0)

Enter the scale error into the Gain Multiplier Box. For example if you feed a calibration signal of 1.0Volts rms into the channel and get a reading of 10.5Grms enter a value of 1.05 to correct the scale error. (assuming the accelerometer is 100mV/G and Gain Multiplier is set to 1.0)

The AZ button will autozero a channel. First install a shunt across the input terminal. Press AZ to automatically enter the correct offset into the dialog box

The AG button will automatically calculate the gain multiplier. First attach a 1Vrms Sinusoidal signal at 1kHz to the input. Press the AG button to automatically calculate the correct gain multiplier.

3.2.6 Temperature Calibration command (Configuration menu)

Temperature Calibration command (Configuration menu)

This command brings up the Temperature Calibration tab on the HanseVIEW Configuration box.

This command is used to calibrate the input scaling factors and offsets, the output scaling factor for the optional 14 thermocouple channels..

The screenshot shows the 'Configuration' dialog box with the 'Accel Sensitivity' tab selected. The dialog has four main tabs: Parameters, Remote, Labels, and Calibration. Under 'Parameters', there are three sub-tabs: Temp Calibration, Accel Sensitivity (selected), and System Units. The 'Input Channels' section contains 16 channels (Ch1 to Ch16) arranged in three rows. Each channel has an 'Offset °C' and a 'Gain Multiplier' field. Ch3's 'Offset °C' is highlighted with a blue selection box. The 'Calibration Calculator' section at the bottom has two rows for 'Point#1' and 'Point#2', each with 'Actual' and 'Reading' fields. A 'Calculate ->' button is next to these fields. To the right of the calculator are 'Offset °C' and 'Gain Multiplier' fields. At the bottom of the dialog are 'OK', 'Cancel', 'Apply', and 'Help' buttons.

Channel	Offset °C	Gain Multiplier
Ch1	0.000000	1.000000
Ch2	0.000000	1.000000
Ch3	0.000000	1.000000
Ch4	0.000000	1.000000
Ch5	0.000000	1.000000
Ch6	0.000000	1.000000
Ch7	0.000000	1.000000
Ch8	0.000000	1.000000
Ch9	0.000000	1.000000
Ch10	0.000000	1.000000
Ch11	0.000000	1.000000
Ch12	0.000000	1.000000
Ch13	0.000000	1.000000
Ch14	0.000000	1.000000
Ch15	0.000000	1.000000
Ch16	0.000000	1.000000

Point#	Actual	Reading
Point#1	0	0
Point#2	100	100

Calculate -> Offset °C: 0.0 Gain Multiplier: 1.0

3.2.7 Accelerometer Sensitivity command (Configuration menu)

Accelerometer Sensitivity command (Configuration menu)

This command brings up the Accel Sensitivity tab on the HanseVIEW Configuration dialog box.

The Configuration dialog box has tabs for Parameters, Remote, Labels, Calibration, Temp Calibration, Accel Sensitivity, and System Units. The Accelerometers tab is active, showing settings for 16 channels (Ch 1 to Ch 16). Each channel has a sensitivity input (mV/G), an IEPE checkbox, a Serial Number field, and a Calibrate Date field. The Output Sensitivity section has two rows of inputs for V and G RMS, with equals signs between them.

Ch 1 IEPE		Ch 2 IEPE		Ch 3 IEPE		Ch 4 IEPE		Ch 5 IEPE		Ch 6 IEPE		
mV/G	100		100		100		100		100		100	
Serial Number												
Calibrate Date												

Ch 7 IEPE		Ch 8 IEPE		Ch 9 IEPE		Ch 10 IEPE		Ch 11 IEPE		Ch 12 IEPE		
mV/G	100		100		100		100		100		100	
Serial Number												
Calibrate Date												

Ch 13 IEPE		Ch 14 IEPE		Ch 15 IEPE		Ch 16 IEPE		Output Sensitivity	
mV/G	100		100		100		100		V G RMS
Serial Number									0 = 0
Calibrate Date									0 = 100

Buttons: OK, Cancel, Apply, Help

Use this dialog box to enter the calibrated sensitivity ratings for your accelerometers in mV/G.

If the IEPE checkbox is checked a 2.1 mA excitation current is supplied to the transducer.

The Output Sensitivity is used when sending the Control RMS level back to the controller. If this option is not i use, make sure that both Voltages values are 0.

3.2.8 Units command (Configuration menu)

Units command (Configuration menu)

This command brings up the System Units tab on the HanseVIEW Configuration dialog box.

The Configuration dialog box has tabs for Parameters, Remote, Labels, Calibration, Temp Calibration, Accel Sensitivity, and System Units. The System Units tab is active, showing settings for six measurement types:

- Acceleration:** Radio buttons for m/s², mm/s², in/s², ft/s², G (selected), and Custom unit. Custom unit fields show 1 cm/s² = 0.01 m/s².
- Velocity:** Radio buttons for m/s, mm/s, in/s (selected), ft/s, and Custom unit. Custom unit fields show 1 cm/s = 0.01 in/s.
- Displacement:** Radio buttons for m, mm, in (selected), ft, and Custom unit. Custom unit fields show 1 cm = 0.01 m.
- Temperature:** Radio buttons for °C (selected), °F, and kelvin.
- Humidity:** Radio buttons for % RH (selected), Custom unit, and Custom unit. Custom unit fields show 1 % = 0.01 % RH.
- Spectral Density:** Radio buttons for G²/Hz (selected), (m/s²)²/Hz, (in/s²)²/Hz, and Custom unit. Custom unit fields show 1 (cm/s²)²/Hz = 1.03982e-0 G²/Hz.

At the bottom, there is a checkbox for "Use ^2 for squared units" and buttons for OK, Cancel, Apply, and Help.

Use this dialog box to select and define the desired units to be used by the program. Changing the units will stop any active test.

Select the desired units for Acceleration, Velocity, Displacement, Force, Mass and Acceleration Spectral Density. If the listed units are not appropriate for your test, custom units may be defined by entering a label in the upper box (between the 1 and the =), and the appropriate scaling factor from the SI unit in the lower box. The unit label and scale factor must make the equation correct. For example:

$$1 \text{ oz} = 0.02835 \text{ kg}$$

Use this command to select and define the desired units to be used by the program.

3.2.9 Security Menu (ConfigurationMenu)

Security Menu.

This menu is only visible if the Enhanced Security Mode is enabled.

Select the desired security level or change the password.

3.2.10 Controller PID (Configuration menu)

Controller PID command (Configuration menu)

This command opens the Controller PID dialog Box.

Control Parameters

Product		Vibration	Humidity
Heat	Cool		
Proportional	Proportional	Proportional	Proportional
0.000000	0.000000	0.000000	0.000000
Integral	Integral	Integral	Integral
0.000000	0.000000	0.000000	0.000000
Derivative	Derivative	Derivative	Derivative
0.000000	0.000000	0.000000	0.000000

Air		Get Parameters Send Parameters Hide Window
Heat	Cool	
Proportional	Proportional	
0.000000	0.000000	
Integral	Integral	
0.000000	0.000000	
Derivative	Derivative	
0.000000	0.000000	
Max Boost	Max Boost	
0.000000	0.000000	

Use Get Parameters Pushbutton to retrieve parameters for loop controller

Enter modified values into respective boxes

Use Send Parameters Pushbutton to accept modified values and send to loop controller

Proportional Band: Define a band for PID control, entered in degrees or units.

Lower values increase gain, which reduces droop but can cause oscillation.

Increase the proportional band to eliminate oscillation.

Integral (Reset): Define the integral time in minutes per repeat; define reset in repeats per minute.

Set repeats per minute if units are U.S. minutes per repeat if units are SI.

Derivative (Rate): Define the derivative (rate) time in minutes.

Large values prevent overshoot but can cause sluggishness.

Decrease if necessary.

Max Boost: In deviation cascade mode max boost will determine the maximum the air loop will deviate above and below the setpoint. The cool deviation should always be negative

3.3 Test menu

3.3.1 Test menu commands

Test menu commands


The test menu is used to select, load, save, start, and stop tests. It offers the following commands:

Select Test Type	Chamber type test.
Run Test	running the current test.
Stop Test	the current test.
Advance to next level	to the beginning of the next level.
Test Schedule	and run a list of tests to run in sequence.
New Test	a new test profile.
Open Test	an existing test profile.
Open Recent Test	displays recently used test
Edit Test	the current test.

3.3.2 Select Test Type command (Test menu)

Select Test Type command (Test menu)

Use this command to select type of test you will be running. The HanseVIEW Test Type dialog box will appear, allowing selection of the test type. The different test types are software options that are protected by a hardware key. If your hardware key does not have an option enabled, you will still be able to switch to that mode, define profiles, and load and plot data sets, but you will not be able to run the test. Contact Vibration Research Corp. for information on options that are not enabled. If you are running HanseVIEW, your test types are limited to Repetitive Shock.

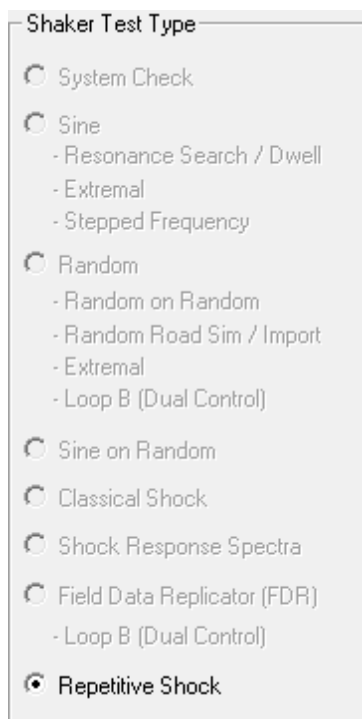

Shortcuts:**3.3.3 Run Test command (Test menu)****Run Test command (Test menu)**

Use this command to start the current test. See also: Stop Test

Shortcuts

Toolbar:



Controls:

Keys:

F9

3.3.4 Stop Test command (Test menu)**Stop Test command (Test menu)**

Use this command to stop any running test. See also: Run Test

Shortcuts

Toolbar:



Controls:

Keys:

F10

3.3.5 Advance to next level (Test menu)**Advance to next segment command (Test menu)**

Use this command while a test is running to skip the remaining time in the current segment and to begin the next segment.

Shortcuts


Keys:

F11

3.3.6 Test Schedule command (Test menu)**Test Schedule command (Test menu)**

Use this command to build a schedule of tests. To create a test schedule, first define the tests, and then use this command to bring up the Test Schedule dialog box to add the tests to the test sequence.

This dialog box is accessed by selecting the Test..Test Schedule menu command.

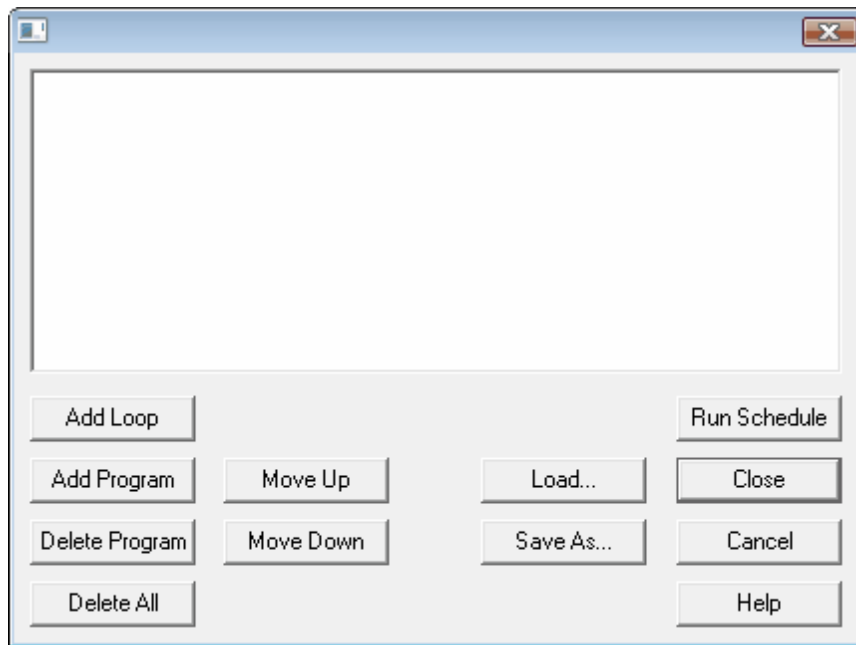

Use this dialog box to build a schedule of tests to run in sequence. The tests will be run in the listed order, with each test running for the duration specified within the individual test's schedule. There will be a pause of approximately 5 seconds between each test.

The schedule will be aborted if a test is shut down prior to completion of the schedule. (For example, if the operator presses the "Stop" button, or a test encounters an error condition.)

Click the "Run Schedule" button to run all tests beginning with the first test. If you want to start the schedule at a specific test, first select that test, and then click the "Run Schedule" button.

To add programs to the test schedule, select the test you want the new test to follow, and click the "Add Program" button. You will be prompted for a test name. When you click the "Open" button, that test will be added to the schedule.

To remove programs from the test schedule, select the test you want to remove, and then click the "Delete Program" button. Click the "Delete All" button to clear all entries in the list.

To repeat a sequence of tests multiple times, select the last test you want in the repeat sequence, and then click the "Add Loop" button. A Schedule Loop dialog will appear prompting you for the first test in the sequence and the number of times you want the sequence performed.

To change the settings of an existing loop, select loop in the schedule, and then click the "Add Loop" button.

Test schedules may be saved on the hard disk by clicking the "Save As..." button, and later loaded back in by clicking the "Load..." button.

3.3.7 New Test command (Test menu)

New Test command (Test menu)

Use this command to have the program guide you through a series of dialog boxes to define a new test. All values are initialized to their defaults, and may then be changed as required by your test.

If your new test is substantially similar to another test you have already defined, open a similar test using the Test..Open Test menu command, and then use the Test..Edit Test menu command to bring up the Define Test dialog. Use the "Save As..." button in that dialog box to save the test under a new name.

Shortcuts

Toolbar:



3.3.8 Open Test command (Test menu)

Open Test command (Test menu)

Use this command to open any previously defined and saved test profile.

Shortcuts

Toolbar:



3.3.9 Open Recent Test command (Test menu)

Open Recent Test command (Test menu)

This command brings up a pop-up submenu with a list of the 10 most recently used tests. To open one of the tests listed, click on it with the mouse.

3.3.10 Edit Test command (Test menu)

Edit Test command (Test menu)

This command opens the Define Test dialog box allowing the user to edit the currently loaded test.

You can also open a previously defined test, or save the test under a different name from the Define Test dialog.

Shortcuts

Toolbar:



3.4 Graph menu

3.4.1 Graph Menu Commands

Graph menu commands

The graph menu is used to adjust the display of graphs and cursors. It offers the following commands:


Graph Colors	the default colors used by the graphs.
Graph Update Time	the graph update interval.
Pause Graph Updates	/resume the automatic updating of the graphs
Edit Graph Settings	the lines and type of graph for the selected graph.

Y-Axis Autoscale	the amplitude axis of the selected graph.
Full Autoscale	both axes of the selected graph.
Refresh Graph	the selected graph.

3.4.2 Graph Colors command (Graph menu)

Graph Colors command (Graph menu)

This dialog box is accessed by selecting the Graph..Graph Colors menu command.

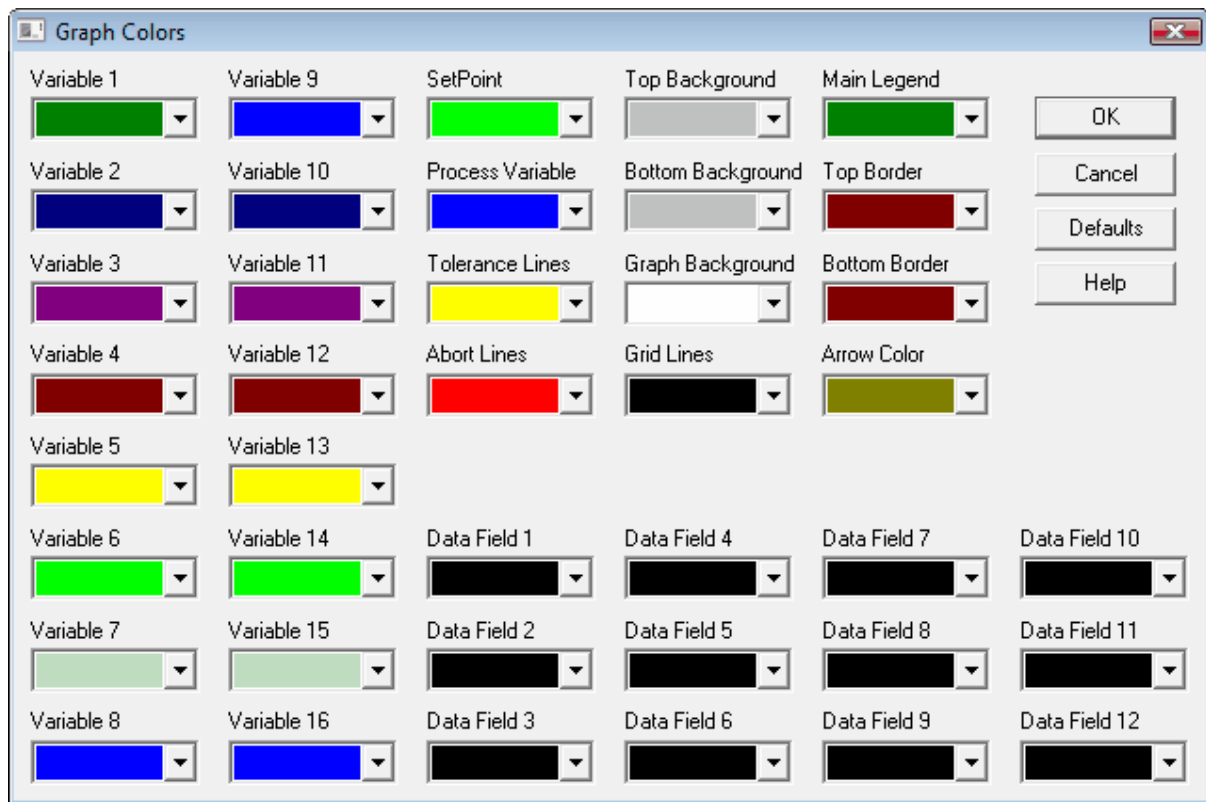

Use this dialog box to set the default colors for various components of the graphs.

Changes made here will only affect graphs created after changing the colors - already open graphs will retain the old settings. To update the colors on any already-open graph, select the graph, press Ctrl+G (Edit Graph Settings command), and then click the "OK" button.

3.4.3 Graph Update Time command (Graph Menu)

Graph Update Time command (Graph menu)

The value specified is the number of milliseconds between graph updates. The default value is 1000 ms (i.e. 1 second).

3.4.4 Pause Graph Updates (Graph menu)

Pause Graph Updates (Graph menu)

Use this command to manually pause or resume the automatic graph refreshes.

Shortcuts

Keys: Ctrl+P

3.4.5 Edit Graph Settings command (Graph menu)**Edit Graph Settings command (Graph menu)**

Use this command to open the Graph Settings dialog box appropriate for the currently selected graph. You may then modify the type of graph, the traces displayed on the graph and the axis settings. Click the "OK" button to have the graph rebuilt with these new settings.

See also:

Repetitive Shock Graph Settings dialog box

Shortcuts

Toolbar:



Keys:

Ctrl+G

3.4.6 Y-Axis Autoscale command (Graph menu)**Y-Axis Autoscale command (Graph menu)**

Use this command to automatically set the vertical (Y-axis) scale such that the data shown in the current plot fits on the display.

See also: Full Autoscale

Shortcuts

Keys:

Ctrl+A

3.4.7 Full Autoscale command (Graph menu)**Full Autoscale command (Graph menu)**

Use this command to automatically set both horizontal and vertical axis scales such that the traces of the selected graph fit on the screen.

See also: Y-Axis Autoscale

Note: You can zoom into a region of the graph by clicking with the right mouse button on one corner of the desired view, holding the button down while moving the mouse to enclose the desired region, and then releasing the right mouse button.

Shortcuts

Toolbar:



Keys:

Ctrl+F

Mouse:

Double-click the right mouse button

3.4.8 Refresh Graph command (Graph menu)**Refresh Graph command (Graph menu)**

Use this command to redraw the selected graph.

Shortcuts

Keys: F5

3.5 Cursor menu**3.5.1 Cursor Menu Overview****Cursor Menu commands**

This menu is used to configure cursors. It offers the following commands:

Display Cursor Window	the cursor window on and off
Set Base Cursor	the fixed cursor at the current mouse position
Next Differential Cursor	through the various cursor modes
Prev Differential Cursor	backwards through the various cursor modes
Standard Cursor	a window with the data at the current cursor location
Delta Cursor	the difference between two cursors
Slope Cursor	rate of change between two cursors
Minimum Cursor	minimum value between two cursors
Maximum Cursor	maximum value between two cursors
Mean Cursor	mean value between two cursors
Dual Cursor	values at each of two cursors
RMS Cursor	the RMS value between two cursors
Add Annotation	a graph annotation at the current cursor location
Move Annotation	the currently selected graph annotation
Remove Annotation	the currently selected graph annotation
Remove All Annotations	all annotation strings from the active graph

Tips:

- To use the dual cursor modes (Delta, Slope, Minimum, Maximum, Mean, Dual and RMS) move the cursor to the FIRST cursor location.
- Use the <Home> key to lock the cursor in this position.
- Holding down the <Shift> key while moving the mouse snaps the cursor to the nearest peak. Pressing the <Home> key while holding down the <Shift> key locks the first cursor at the location of the peak.
- Holding down the <Ctrl> key while moving the mouse snaps the cursor to the nearest valley. Pressing the <Home> key while holding down the <Ctrl> key locks the first cursor at the location of the valley.
- After locking the FIRST cursor, use the mouse to move the primary cursor. The calculated values between the two cursors are displayed in the cursor window (depending on the cursor mode).
- Use the <Home> key at any point to move the FIRST cursor to the current primary cursor location.
- Use <PgUp> and <PgDn> to cycle through the cursor modes.
- Use annotations to display multiple cursor intervals on the screen. Annotations will display any of the special mode cursors and update on live graphs.

3.5.2 Cursor Display command (Graph menu)**Display Cursor Window command (Graph menu)**

Use this command to bring up the Cursor Display box that shows the values for the graph traces at the

current cursor position.

Holding down the <Shift> key while moving the cursor with the mouse snaps the cursor to the nearest peak.

Holding down the <Ctrl> key while moving the cursor with the mouse snaps the cursor to the nearest valley.

Shortcuts

Keys: Ctrl+D

3.5.3 Set Base Cursor

Set Base Cursor command (Cursor menu)

Use this command to lock the dual cursor at the current cursor position. The primary cursor then moves freely with the mouse.

Holding down the <Shift> key while moving the cursor with the mouse snaps the cursor to the nearest peak.

Holding down the <Ctrl> key while moving the cursor with the mouse snaps the cursor to the nearest valley.

Shortcuts

Keys: <Home>

3.5.4 Next Differential Cursor Command

Next Differential Cursor command (Cursor menu)

Use this command to cycle the dual cursor to the next cursor mode.

The cursor modes are:

Standard Cursor	a window with the data at the current cursor location
Delta Cursor	the difference between two cursors
Slope Cursor	rate of change between two cursors
Minimum Cursor	minimum value between two cursors
Maximum Cursor	maximum value between two cursors
Mean Cursor	mean value between two cursors
Dual Cursor	values at each of two cursors
RMS Cursor	the RMS value between two cursors

Shortcuts

Keys: <PgUp>

3.5.5 Prev Differential Cursor command (Cursor menu)

Previous Differential Cursor command (Cursor menu)

Use this command to cycle the dual cursor to the previous cursor mode.

The cursor modes are:

Standard Cursor	a window with the data at the current cursor location
Delta Cursor	the difference between two cursors

Slope Cursor	rate of change between two cursors
Minimum Cursor	minimum value between two cursors
Maximum Cursor	maximum value between two cursors
Mean Cursor	mean value between two cursors
Dual Cursor	values at each of two cursors
RMS Cursor	the RMS value between two cursors

Shortcuts

Keys: <PgDn>

3.5.6 Standard Cursor command (Cursor menu)**Standard Cursor command (Cursor menu)**

Display a window with the data of the current cursor location.

Shortcuts

Keys: <End>

3.5.7 Delta Cursor command (Cursor menu)**Delta Cursor command (Cursor menu)**

Display the difference between two cursors.

3.5.8 Slope Cursor command (Cursor menu)**Slope Cursor command (Cursor menu)**

Display the rate of change between two cursors.

3.5.9 Minimum Cursor command (Cursor menu)**Minimum Cursor command (Cursor menu)**

Display the minimum value between two cursors.

3.5.10 Maximum Cursor command (Cursor menu)**Maximum Cursor command (Cursor menu)**

Display the maximum value between two cursors.

3.5.11 Mean Cursor command (Cursor menu)**Mean Cursor command (Cursor menu)**

Display the mean value between two cursors.

3.5.12 Dual Cursor command (Cursor menu)**Dual Cursor command (Cursor menu)**

Display values at each of two cursors.

3.5.13 RMS Cursor command (Cursor menu)

RMS Cursor command (Cursor menu)

Compute the RMS value between two cursors.

3.5.14 Add Annotation command (Graph menu)

Add Annotation command (Graph menu)

Use this command to annotate the current graph with the trace values at the current cursor position. To display a vertical cursor bar to help with selection of data, turn on the cursor display using the Graph.. Cursor Display menu command.

Tips:

- To accurately place an annotation, first use the right mouse button (click, drag, release) to zoom in on the region of interest. Add the annotation by positioning the cursor and pressing the <Insert> key. Zoom out by double-clicking the right mouse.
- To move an annotation, click on the annotation with the left mouse button, hold the button down, move the mouse to the new location, and release the left mouse button.
- Holding down the <Shift> key snaps the cursor to the nearest peak. Press the <Insert> key while holding down the <Shift> key to put an annotation at the location of the peak.
- Holding down the <Ctrl> key snaps the cursor to the nearest valley. Press the <Insert> key while holding down the <Ctrl> key to put an annotation at the location of the valley.
- After creating an annotation you can double-click it (using the left mouse button) to edit the text.

See also: Cursor Display, Remove Annotation, Move Annotation

Shortcuts

Keys:	Insert	
	F8	
	Shift-Insert	Insert annotation at the nearest peak
	Ctrl-Insert	Insert annotation at the nearest valley

3.5.15 Remove Annotation command (Graph menu)

Remove Annotation command (Graph menu)

Use this command to remove the currently selected annotation. First click on the annotation (a black rectangle will briefly encircle the text) and then use this command to remove the annotation.

See also: Add Annotation, Move Annotation

Shortcuts

Keys:	Delete
	F7

3.5.16 Remove All Annotation command (Graph Cursor)

Remove All Annotation command (Graph menu)

Use this command to remove the all annotations.

3.5.17 Move Annotation command (Graph menu)

Move Annotation command (Graph menu)

Use this command to change the position of the currently selected annotation. First click on the annotation text (a black rectangle will briefly encircle the text), and then use this command to start the move. Move the mouse pointer to the desired location for the annotation, and click the left mouse button to complete the move.

Tip: You can also move an annotation by pointing to the annotation text with the mouse, clicking the left mouse button, holding that button down while moving the mouse cursor to the desired location and releasing the button to complete the move.

See also: Add Annotation, Remove Annotation

Shortcuts

Mouse:	Click and drag the annotation
Keys:	F4

3.6 View menu

3.6.1 View menu commands

View menu commands


The View menu offers the following commands:

Toolbar	show or hide the toolbar.
Status Bar	show or hide the status bar.
Control buttons	show or hide the active Control Center
Reset Control buttons	reset the control window to the default location
ToolTips	enable or disabled ToolTips
Chamber Big Display	Big display of Process Variables and Setpoints
Cursor Display	and hides the Cursor Window
Temperature 3-16	optional temperature board in installed, displays toolbar with temperature channels 3-16. Required Temperature extender option.
Accels 1-4	sets of 4 channels of accelerometers as a toolbar, If more than 4 channels are included in system, additional displays may be available

3.6.2 Toolbar command (View menu)


Toolbar command (View menu)

Use this command to show or hide the Toolbar that includes buttons for some of the most common commands in HanseVIEW, such as the File..Open Data menu command. A check mark appears next to the menu item when the Toolbar is shown.

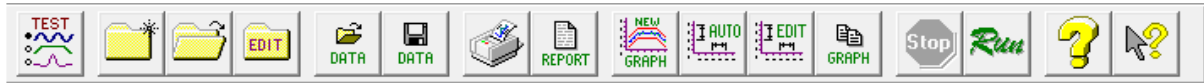

The toolbar is displayed across the top of the application window, below the menu bar. The toolbar provides quick mouse access to many tools used in HanseVIEW,

Click:

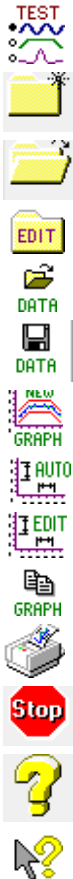

To:

- Change the test type (Test..Select Test Type)
- Create a new test (Test..New Test)
- Open an existing test (Test..Open Test)
- Edit the current test (Test..Edit Test)
- Open a stored data file (File..Open Data)
- Save the current data to a file (File..Save Data)
- Create a new graph (File..New Graph)
- Autoscale the selected graph (Graph..Full Autoscale)
- Edit the selected graph's settings (Graph..Edit Graph Settings)
- Copy the selected graph to the windows clipboard (File..Copy Graph)
- Print the selected graph (File..Print)
- Stop the current test (Test..Stop Test)
- Show the opening screen of the help file (Help..Help)
- Context sensitive help (Help..What's This?)

3.6.3 Status Bar command (View menu)

Status Bar command (View menu)

Use this command to show or hide the Status Bar that describes the action to be executed by the selected menu item or depressed toolbar button and keyboard latch state. A check mark appears next to the menu item when the Status Bar is shown.

Status Bar

Ready

Chamber Default 0x01a0

The status bar is displayed at the bottom of the HanseVIEW window.

The left area of the status bar describes actions of menu items as you use the arrow keys to navigate through menus. This area similarly shows messages that describe the actions of toolbar buttons and the meaning of numbers as you move the mouse over the buttons and numbers, respectively. When the mouse is not over a toolbar or menu, this area displays the current stop code.

The three other areas of the status bar indicate, from left to right, the current test type (e.g. Chamber), the name of the currently loaded test (e.g. Default), and the serial number of this controller machine (e.g. 0x0001).

3.6.4 Control Buttons command (View menu)

Control buttons command (View menu)

Use this command to show or hide the active Control Center that contains buttons for starting and stopping tests, and also contains the current test measurements. A check mark appears next to the menu item when the Control Center is shown.

See the following for help on the various Control Centers:

- Chamber Control Center
- Repetitive Shock Information
- Additional 14 Channels of Temperature Information

3.6.5 Reset Control Buttons command (View menu)

Reset Control buttons command (View menu)

Use this command to reset the size and position of the Control Center that contains buttons for starting and stopping tests, and also contains the current test measurements. Use this command if you accidentally move the Control Center to the edge of the screen and aren't able to select it to move it.

3.6.6 ToolTips command (View menu)


ToolTips command (View menu)

Use this command to enable or disable display of tooltips in the toolbar and the Control Centers. A tooltip is a small window that displays context sensitive help information when you point the mouse at a button on the toolbar. A check mark appears next to this menu item when tooltips are enabled.


3.6.7 View Chamber Big Display command (View menu)

View Big Display (View menu)

Use this command to show or hide the Big Display dialog.

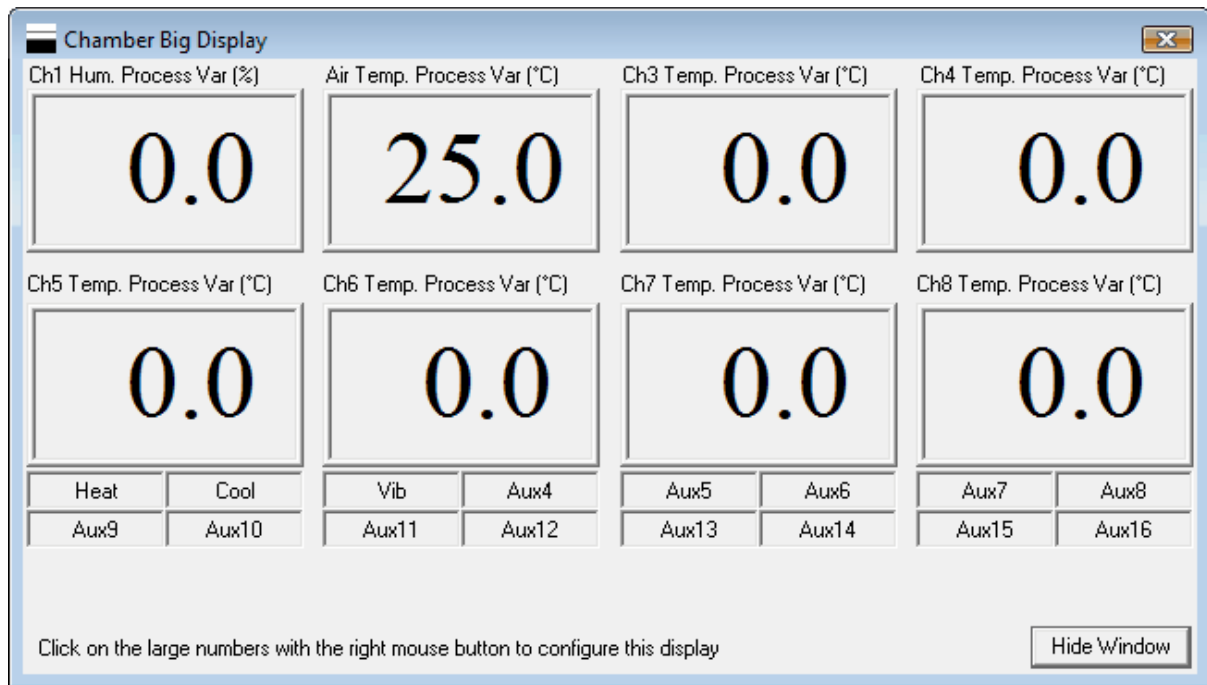

Click on the large numbers with the RIGHT mouse button to configure the display.

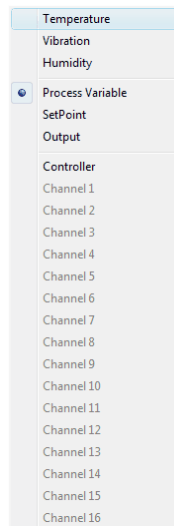


3.6.8 Cursor Display command (View Menu)

Cursor Display (View menu)

Show or hide the cursor display.

This dialog box will display the values of the graph data at the cursor position in the currently selected graph.

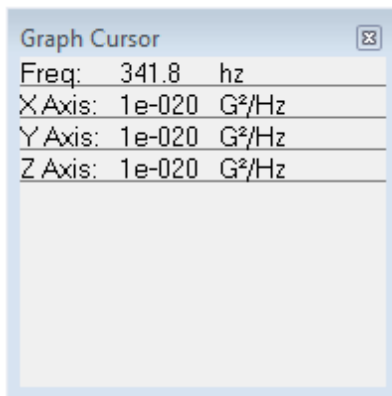

3.6.9 Temperatures (3-16) command (View Menu)

Temperatures (3-16) command (View menu)

Show or hide the thermocouples display of the optional 14 channel thermocouple input.

Ch3 - °C	Ch4 - °C	Ch5 - °C	Ch6 - °C
Ch7 - °C	Ch8 - °C	CH9 - °C	CH10 - °C
CH11 - °C	CH12 - °C	CH13 - °C	CH14 - °C
CH15 - °C	CH16 - °C		

3.6.10 Accelerometers (1-4) command (View Menu)

Accelerometers (1-4) command (View menu)

Show or hide the repetitive shock control center.

X Axis G RMS	Y Axis G RMS	Z Axis G RMS	Ch4 G RMS
0.00	0.00	0.00	-
Fatigue	Fatigue	Fatigue	Fatigue
0.000	0.000	0.000	-

3.7 Window menu

3.7.1 Window menu commands

Window menu commands

The Window menu offers the following commands that allow you to arrange multiple views of multiple documents in the application window:

New Window	a new window that views the same document.
Cascade	windows in an overlapped fashion.
Tile Horizontal	windows in non-overlapped tiles, horizontally.
Tile Vertical	windows in non-overlapped tiles, vertically.

Arrange Icons icons of closed windows.
Window 1, 2, ... to specified window (graph).

3.7.2 New Window command (Window menu)

New Window command (Window menu)

Use this command to open a new window with the same data as the active window. You can open multiple document windows to display different views of a data set at the same time. If you change the contents in one window, all other windows containing the same data set reflect those changes. When you open a new window, it becomes the active window and is displayed on top of all other open windows.

3.7.3 Cascade command (Window menu)

Cascade command (Window menu)

Use this command to arrange multiple open windows in an overlapped fashion.

3.7.4 Tile Horizontal command (Window menu)

Tile Horizontal command (Window menu)

Use this command to arrange multiple open windows in a non-overlapping fashion, with the preference being that the graphs be stacked one above the other in a horizontal fashion.

3.7.5 Tile Vertical command (Window Menu)

Tile Vertical command (Window menu)

Use this command to arrange multiple open windows in a non-overlapping fashion, with the preference being that the graphs be stacked one beside the other in a vertical fashion.

3.7.6 Arrange Icons command (Window menu)

Arrange Icons command (Window menu)

Use this command to arrange the icons for minimized windows at the bottom of the main window. If there is an open document window at the bottom of the main window, then some or all of the icons may not be visible because they will be underneath this document window.

3.7.7 1, 2, ... command (Window menu)

1, 2,...command (Window menu)

HanseVIEW displays a list of currently open document windows at the bottom of the Window menu. A check mark appears in front of the document name of the active window. Choose a document from this list to make its window active.

3.8 Help menu

3.8.1 Help menu commands

Help menu commands

The Help menu offers the following commands that provide you assistance with this application:

Help	the help file to the overview page
Contents and Index	you an index to topics for which you can get help
What's This?	this to get context-sensitive help information.
About HanseVIEW...	application information.

3.8.2 Help command (Help menu)

Help command (Help menu)

Use this command to display the opening screen of Help. From the opening screen, you can jump to step-by-step instructions for using HanseVIEW and various types of reference information.

Once you open Help, you can click the "Contents" button whenever you want to return to the opening screen.

Shortcut

Toolbar:



Keys:

F1

3.8.3 Contents and Index command (Help menu)

Contents and Index command (Help menu)

Use this command to open the help file's table of contents, index, and search functions. You can browse through or search the help file for information on a particular subject.

3.8.4 Context Help

What's This? command (Help menu)

Use the Context Help command to obtain help on some portion of HanseVIEW. When you choose the Toolbar's Context Help button, the mouse pointer will change to an arrow and question mark. Then click somewhere in the HanseVIEW window, such as another Toolbar button or menu item. The Help topic for the item you clicked will be shown.

Shortcut

Toolbar:



Keys:

Shift+F1

3.8.5 About command (Help menu)

About command (Help menu)

Use this command to display the copyright notice and version number of your copy of HanseVIEW.


Part

IV

4 Test Settings

4.1 Chamber Define Dialog Box

Chamber Define dialog box

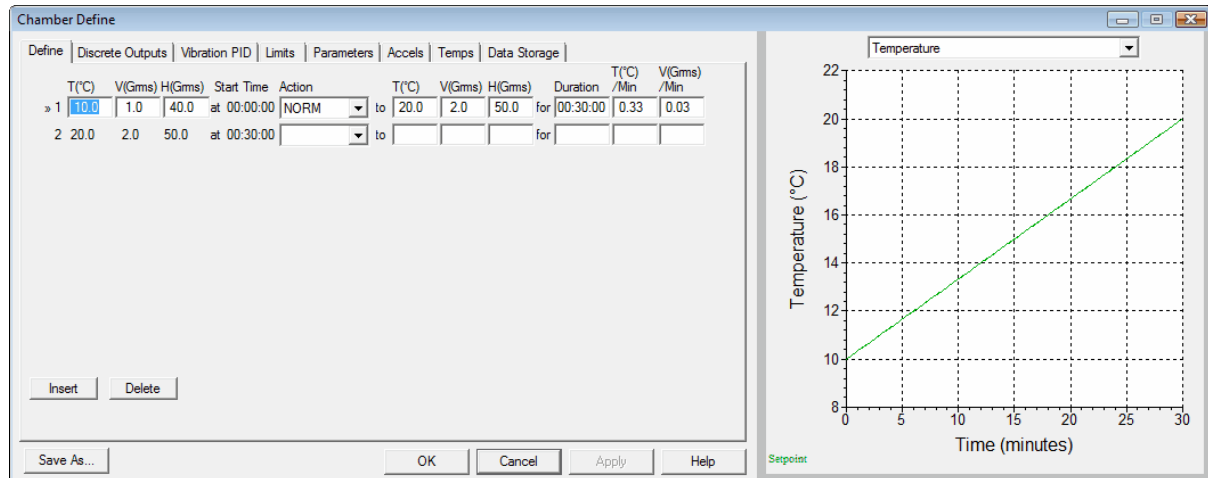

This dialog box is accessed by selecting the Test..Edit Test menu command.

The Test is defined as a sequence of steps with a duration and an ending setpoint for temperature, vibration, and humidity

The first step has the initial setpoint values assignment in the left entries..

Each additional step linearly increments from the ending setpoint of the previous step to the entered setpoint entered in the right entries.

To have the program automatically compute the Duration Enter the ending Temperature and Vibration. If the values are different from the starting temperature and vibration the far right columns will be enabled (white). Enter a rate into the box and the system will recalculate the duration based on the entered rate.

Actions:

- NORM** Step will linearly ramp from initial values in left columns to final values in right columns over time period specified in Duration
- SHORT** Steps will advance the time if the process variable is outside the Soak Setpoint Window. Use SHORT steps to accelerate temperature changes
- G.SOAK** .SOAK holds the current setpoint while the process variable is outside the Setpoint Window. Use G.SOAK to guaranty temperature soak periods.
- WAIT A6** A6 is a special step which will hold the test at current setpoint while the circuit A6 to DGND is OPEN. This functionality requires a IOTech DaqBoard2000 and a DBK203 (or similar) breakout box.
- LOOP** is a special step which repeats previous steps. Loops are specified as loop back step (from) and number of times to repeat the steps.

Insert button inserts a step below the step indicated with a double arrow right of the index number
Delete button deletes the step indicated with a double arrow right of the index number

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph


Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

4.2 Chamber Define Outputs

Chamber Define Discrete Outputs tab

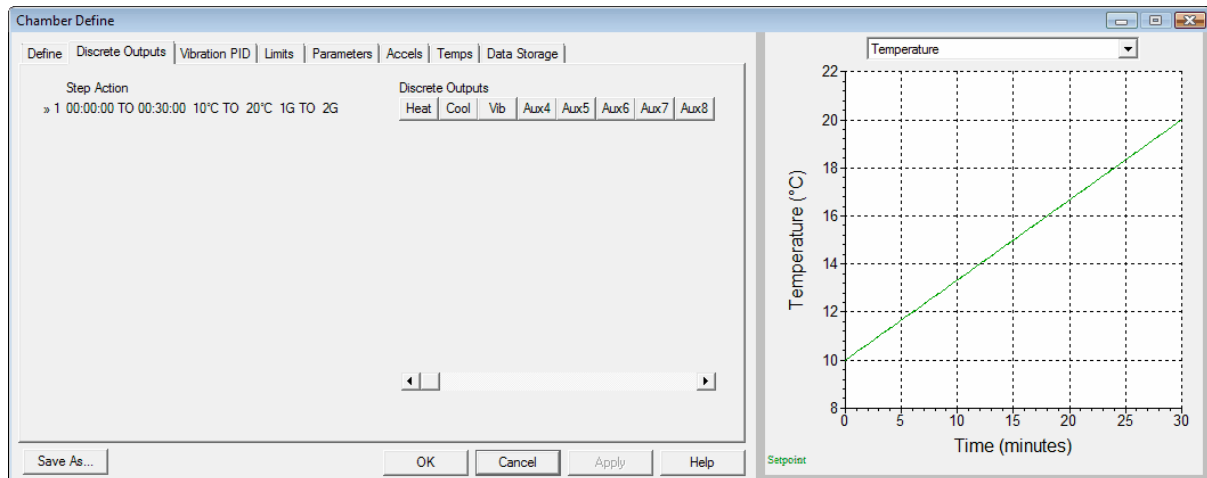

Step Action displaces the sequence of steps previously defined.

Click on pushbutton to toggle the output state on or off for the respective step.



the pushbutton is pressed the output will turn on at the start of the step and remain on the entire step



the pushbutton is off the output will turn off at the start of the step and remain off the entire step

If the pushbutton is pressed the output will turn on at the start of the step and remain on the entire step
If the

The scrollbar on the bottom is displayed if your controller supports more than 8 discrete outputs. Use the bottom scrollbar to display the additional supported outputs.

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph


Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

4.3 Chamber Define Vibration PID

Chamber Define Vibration PID tab

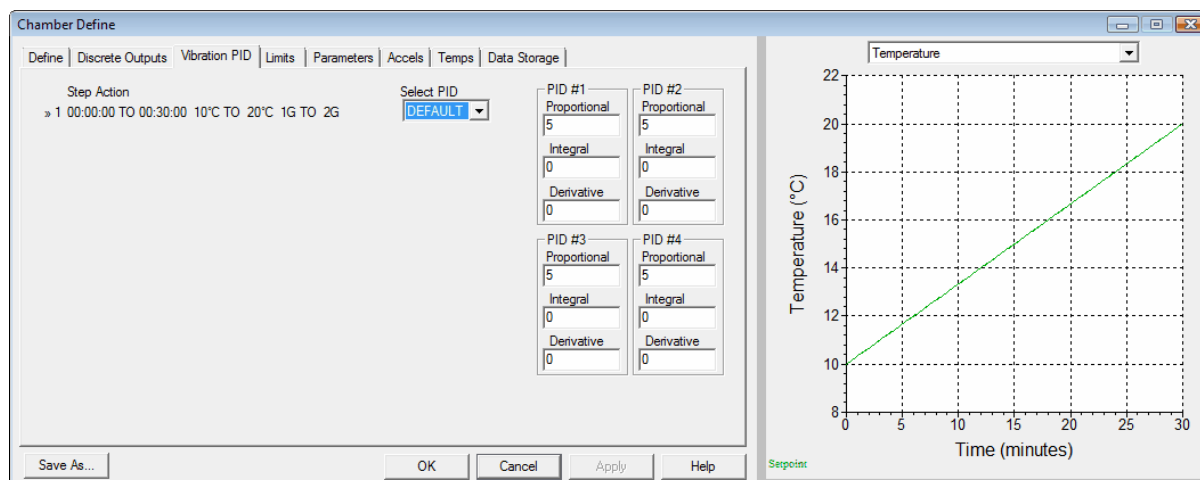

Step Action displays the sequence of steps previously defined.

Additional PID setups can be entered for PID#1 - PID#5.

These additional PID parameters can be loaded into the controller at the beginning of any sequence step. The new PID parameters remain active until new parameters are selected

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph


Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

4.4 Chamber Define Limits

Chamber Define Limits tab

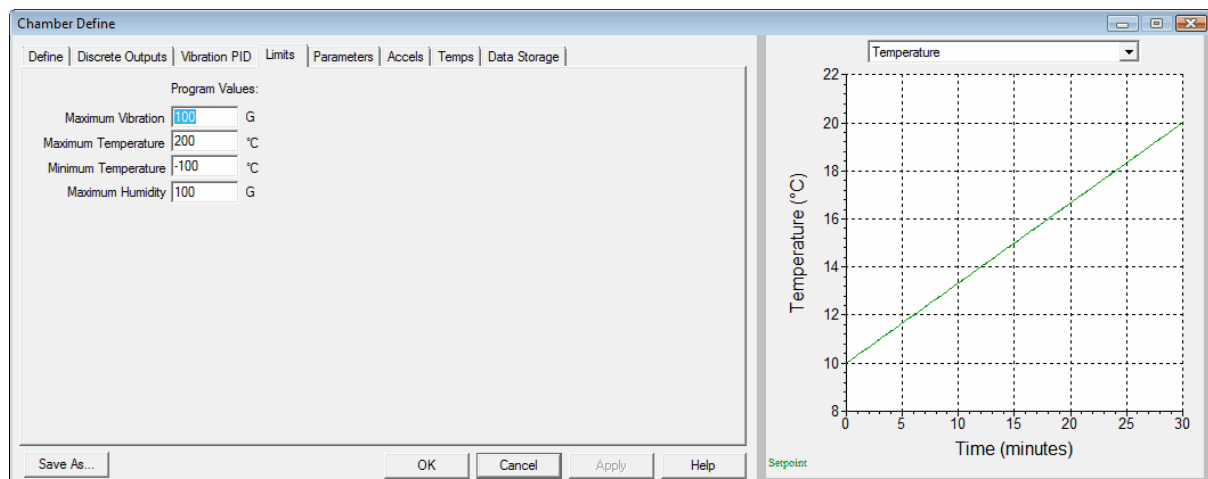

This dialog box is accessed by clicking the "Limits" tab in the Chamber Define dialog box.

Program Values

Maximum Vibration allowed vibration on the product. Vibration exceeding this level on the controller or spectrum hardware will stop the test

Maximum Temperature	allowed temperature on the product. Temperature exceeding this level on the controller will stop the test.
Maximum Vibration Frequency	allowed temperature on the product. Temperature below this level on the controller will stop the test..

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph


Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

4.5 Chamber Define Parameters tab

Chamber Define Parameters tab

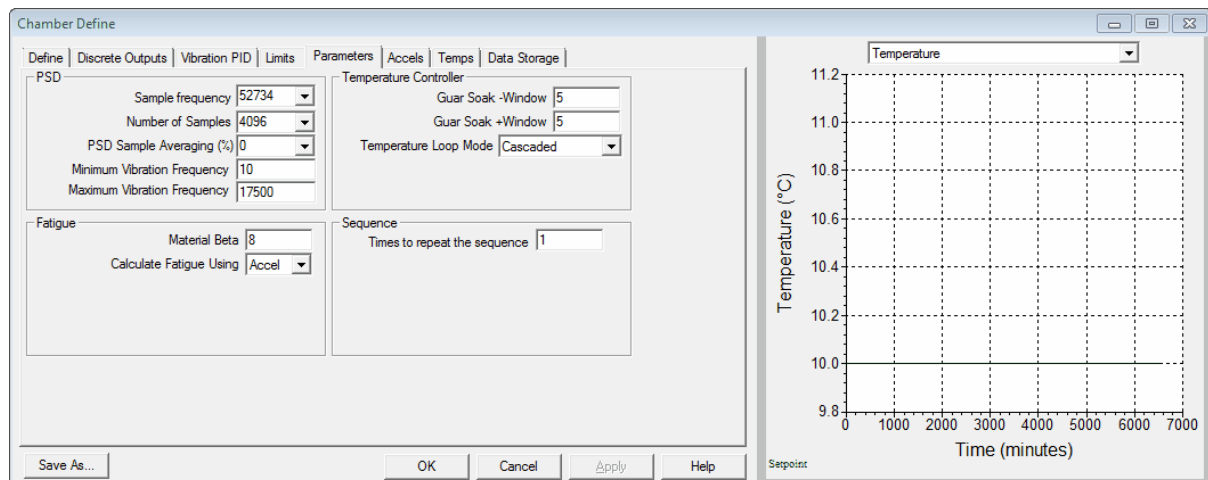

This dialog box is accessed by clicking the "Parameters" tab in the Chamber Define dialog box.

PSD Parameters

Sample Frequency	of scans of each samples channel per second
Number of Samples	Number of samples collected for each channel
PSD Sample Averaging	Number is percentage weighting of previous readings. 99% is maximum averaging, 0% for Averaging OFF
Minimum Vibration Frequency	Frequency used to calculate rms value of current vibration. All frequencies below the minimum vibration frequency will be filtered out.
Maximum Vibration Frequency	Frequency used to calculate rms value of current vibration. All frequencies above the maximum vibration frequency will be filtered out.

Fatigue Parameters

Material Beta	Beta used with Miner's Rule Fatigue calculation
Calculate Fatigue Using	fatigue using velocity or acceleration.

Temperature Controller Parameters

Guar Soak -Window	process value deviation above SP in soak step
Guar Soar +Window	process value deviation below SP in soak step
Temperature Loop Mode	(use product as outer loop /cascaded air setpoint) Single Loop (use Air setpoint alone)
Inner Loop Maximum SP Deviation	maximum air temperature setpoint deviation from current product setpoint. With With Watlow F4 use the Max Boost for the Heat and Cool Loops from Configuration .. Controller Parameters. With JC systems use FASTRAC feature built into controller

Sequence Parameters

Repeats	of times to repeat the entire sequence
---------	--

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph.

Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph


Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

4.6 Chamber Define Accelerometers tab

Chamber Define Accelerometers tab

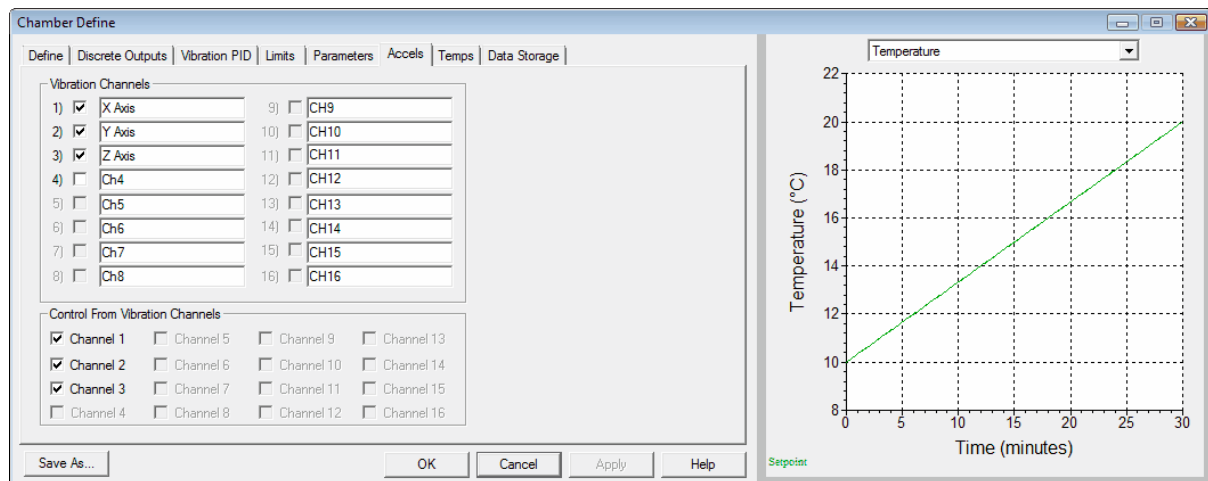

This dialog box is accessed by clicking the "Accels" tab in the Chamber Define dialog box.

Vibration Channels

Channels with a check mark have full spectrum data collection

Channels without a check mark are ignored.

Channels can be labeled individually for this specific test.

Control From Vibration Channels

This section only applies to control systems without independent system control accelerometers. ***All systems with independent control accelerometers always control from the system control***

accelerometers, regardless of what is selected here.

Any or all active vibration channels can be retransmitted on the analog output channel as a DC voltage. If multiple channels are checked they are averaged, then retransmitted.

The output format is defined by channel 1 accelerometer sensitivity.

Example:

If channel 1 input is 10mV/G the output will be 10mV/(Grms). (0VDC = 0Grms, 5VDC=500Grms)

If channel 1 input is 100mV/G the output will be 100mV/(Grms). (0VDC=0Grms, 5VDC=50Grms)

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph.

Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph

Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.


The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
------------	---

OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

4.7 Chamber Define Temperature tab

Chamber Define Temperature tab

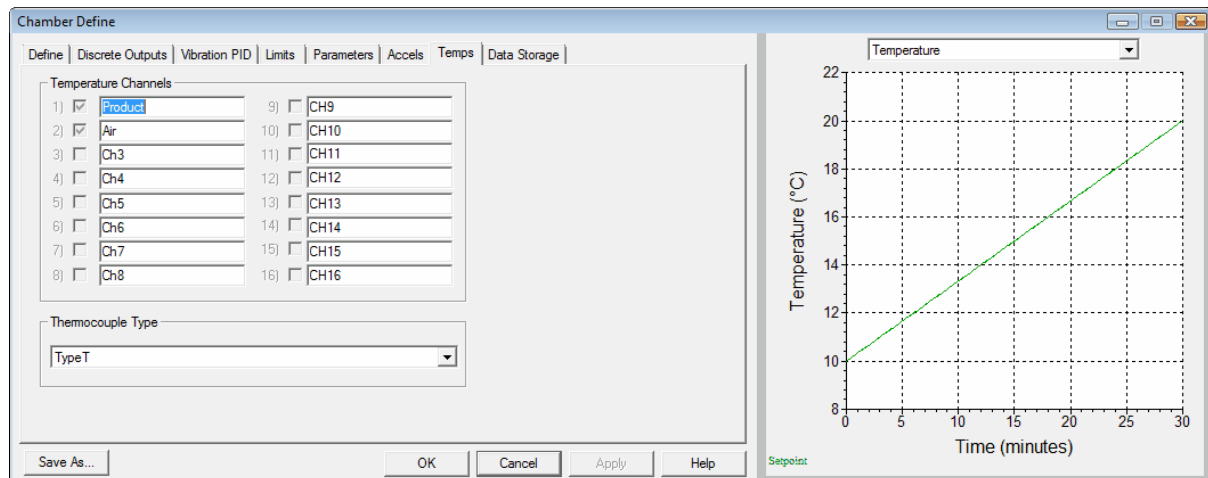

This dialog box is accessed by clicking the "Temps" tab in the Chamber Define dialog box.

Temperature Channels

Channels with a check mark have full spectrum data collection

Channels without a check mark are ignored.

Channels can be labeled individually for this specific test.

Thermocouple Type

Thermocouple type sets thermocouple type for optional channels 3-16. Channels 1 and 2 are internal to your controller and must be set there..

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph


Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop
Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.

4.8 Chamber Define Data tab

Chamber Define Data Storage tab

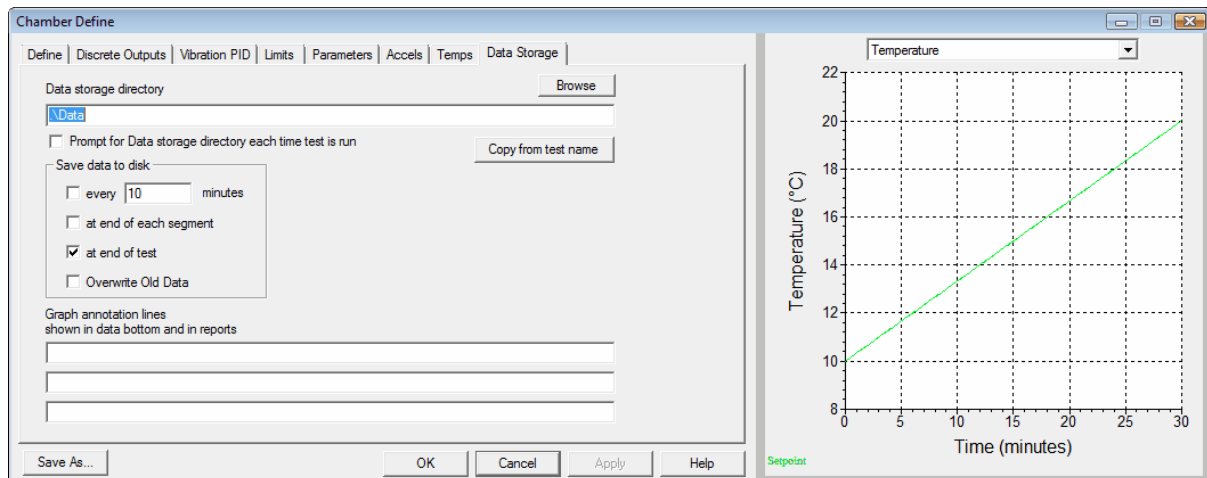

This dialog box is accessed by clicking the "Data" tab on the Chamber Define dialog box.

Use this dialog box to enable automatic data saving to disk. You can save the data at the end of a level, at the end of a test, at the end of a sweep, or at the end of a time period. All data is saved as a time stamped file, and can be viewed at a later time by selecting the Window..New window..Stored data graph display menu command.

You may also select the directory into which to store the data. Click the "Copy from test name" button to automatically create an output directory based on the name of the current test.

The Graph annotation lines are displayed on the Data Bottom portion of a graph (if Data Bottom is selected for the graph) and also will appear in reports generated from this test data.

Graph

The graph displays Temperature, Humidity, or Vibration setpoints. Click on the arrow to the right of the text at top of graph to change displayed graph

Define	a sequence of steps.
Discrete Outputs	discrete outputs turned on for each sequence step.
Vibration PID	PID parameters for each sequence stop

Parameters	control loop parameters.
Limits	maximum and minimum vibration and temperature limits
Accels	and Label spectrum channels.
Temps	and Label temperature channels.
Data Store	automatic data storage parameters.

The buttons at the bottom of the dialog box perform the following operations:

Save As...	the current settings under a new test name.
OK	the changes to this test, and close the dialog
Cancel	the dialog box and abandon all changes
Apply	the changes to the currently running test (does not save changes to the hard disk).
Help	help information about these parameters.



Part

V

5 Control Centers

5.1 Chamber Control Center

Chamber Control Center

				Edit SetPoints Reset Data
Product SetPoint	Air SetPoint	Vibration SetPoint	Humidity SetPoint	
Off	Off	Off	Off	
PV (°C)	PV (°C)	PV (G)	PV (G)	
25.0	25.0	0.0	0.0	
Test Time	Air Setpoint	Level		
00:00:00				
Test Name				
\\Program Files\\HanseVIEW\\Profiles\\Default.vcp				
Stop Code				
Info				

The control centers are docking toolbars, and may be:

- attached to either the left or right side of the HanseVIEW window
- detached and moved independently
- turned on/off by selecting the View..Control buttons menu command

Stop: This button stops the test. You should stop the test before opening a new test. If you stop a test for some reason and desire to continue where you left off, click the "Run" button and click the "Yes" button at the dialog box that asks if you want to continue or start from the beginning. Clicking this button is the equivalent of flipping the stop switch on the front of the I/O box.

Run: This button starts the test. Click this button when you are ready to start your test. This button will show dark green when you are not running, yellow when you are starting, light blue if starting with a memorized drive and green when you are running. This button is the equivalent of flipping the start switch on the front of the HanseVIEW I/O unit.

Reset Data: This button clears the historical high/low/last pass data from the graphs.

Edit Setpoints: This button allows manual override of the set points for the loop controller and also manual override of the discrete outputs. This command displays the Edit Value dialog box.

Channels: These boxes are the input channels. They show you what the system is reading for the shaker acceleration, velocity, or displacement (depending on which mode it is in. See below.).

Elapsed Time: This box shows the current date and time.

Test Name: This box shows the name of the test file that you are running.

Stop Code/Info: This box shows why the test shut down. Click this button for more information on the current status of the test. See also: Stop Codes

Diagnostic counters can be displayed with shortcut <ALT><D>

5.2 Repetitive Shock Control Center

Repetitive Shock Control Center

The toolbar shows rms Vibration information and Fatigue.

The rms Vibration displayed is the filtered input. Edit the maximum and minimum frequencies in Test.. Edit Test, parameters tab.

The Fatigue is independent of any filtering setup in test parameters on the parameters tab

X Axis G RMS	Y Axis G RMS	Z Axis G RMS	Ch4 G RMS
0.00	0.00	0.00	-
Fatigue	Fatigue	Fatigue	Fatigue
0.000	0.000	0.000	-

The control centers are docking toolbars, and may be:

- attached to either the left or right side of the HanseVIEW window
- detached and moved independently
- turned on/off by selecting the View..Control buttons buttons menu command

5.3 Temperatures 3-16

Additional 14 Channels of Temperature Information

Ch3 - °C	Ch4 - °C	Ch5 - °C	Ch6 - °C
Ch7 - °C	Ch8 - °C	Ch9 - °C	CH10 - °C
CH11 - °C	CH12 - °C	CH13 - °C	CH14 - °C
CH15 - °C	CH16 - °C		

The control centers are docking toolbars, and may be:

- attached to either the left or right side of the HanseVIEW window
- detached and moved independently
- turned on/off by selecting the View..Control buttons menu command


Part

VI

6 Typical Views

6.1 Chamber CRT View

Chamber CRT View

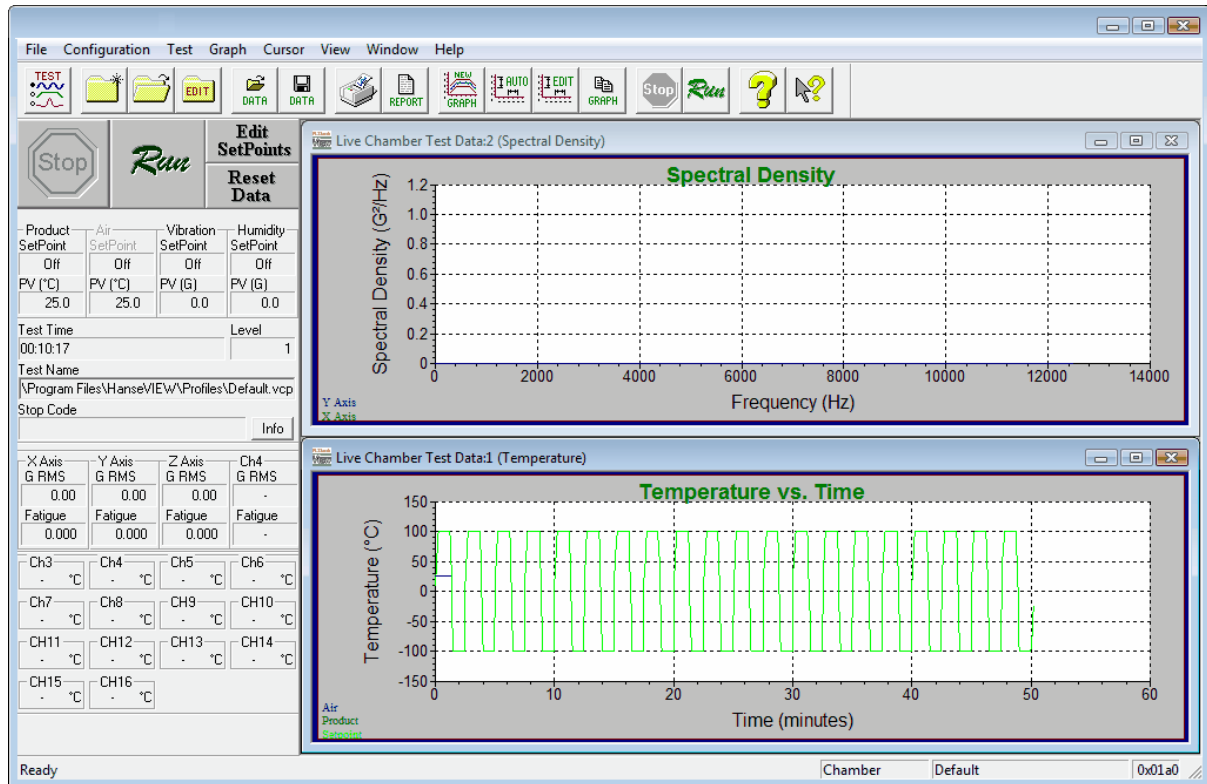

Part

VII

7 Stop Codes

7.1 Stop Codes

Stop Codes

The following codes indicate the status of the controller, and occur during normal controller operation:

Running Test	Starting Schedule	Remote Start
Remote Stop	Front Panel Start	Front Panel Stop
Exceeded Vibration High Limit	Exceeded Temperature High Limit	Exceeded Humidity High Limit
End of Timed Test	Stop Button Pressed	Starting Test
Controller Alarm 1		
Test Parameters Changed	Emergency Stop	Invalid Remote Test

7.2 Running Test

Running Test (Stop Code)

This code indicates that the test is now running.

7.3 Starting Schedule

Starting Schedule (Stop Code)

This code indicates that this test is one of several tests listed in a test schedule, and was started using the Test Schedule dialog box.

7.4 Remote Start

Remote Start (Stop Code)

This code indicates that the test was started using the Remote Start option.

7.5 Remote Stop

Remote Stop (Stop Code)

This code indicates that the test was stopped using the Remote Stop option. When this code is displayed, the test is complete and the output is turned off.

7.6 Front Panel Start

Front Panel Start (Stop Code)

This code indicates that the test was started using the "Start" switch on the front panel of the HanseVIEW I/O unit.

7.7 Front Panel Stop

Front Panel Stop (Stop Code)

This code indicates that the test was stopped using the "Stop" switch on the front panel of the VibrationVIEW I/O unit. When this code is displayed, the test is complete and the output is turned off.

7.8 End of Timed Test

End of Timed Test (Stop Code)

This code indicates that the test was run for the scheduled sequence. When this code is displayed, the test is complete and the output is turned off.

7.9 Test Parameters Changed

Test Parameters Changed (Stop Code)

This code indicates that the test parameters were changed, using either the Test..Edit Test or the Test..New Test menu commands, or their respective toolbar buttons. As a result of the test parameter changes, the test was halted.

7.10 Stop Button Pressed

Stop Button Pressed (Stop Code)

This code indicates that the test was halted through operator control, by selecting either the Test..Stop Test menu command, clicking the "Stop" button on the toolbar, or clicking the "Stop" button in the Chamber Control Center.

7.11 Emergency Stop

Emergency Stop (Stop Code)

This code indicates that the emergency stop input was pressed, causing the controller to shut down. The emergency stop input is an optional accessory that connects to the remote input terminal block on the rear of the HanseVIEW I/O unit. This option is enabled and disabled using the "Emergency stop input" selection in the HanseVIEW Configuration Parameters dialog box.

7.12 Invalid Remote Test

Invalid Remote Test (Stop Code)

This stop code indicates that the "Remote Start/Stop" and "Remote Selection" options are both enabled, but that the test number selected using the remote test selection input does not have a valid test name configured for the current input settings. Select the Configuration..Remote Inputs menu command to verify that the test names configured there are valid.

If you do not want the program to automatically load a test when the remote input signal goes high, set Remote Selection to "Disabled" in the Remote Inputs configuration dialog box. That is, if you want the remote input signal to simply start/stop the current test, enable "Remote Start/Stop" and disable "Remote Selection".

7.13 Starting Test

Starting Test (Stop Code)

The Test is Starting.

7.14 Chamber Exceeded High Limit

Exceeded High Vibration Limit (Stop Code)

This test was stopped because the indicated channel exceeded the high limit set in the test configuration.

7.15 Exceeded Temperature High Limit

Exceeded High Temperature Limit (Stop Code)

This test was stopped because the indicated channel exceeded the high limit set in the test configuration.

7.16 Exceeded Humidity High Limit

Exceeded Humidity Temperature Limit (Stop Code)

This test was stopped because the indicated channel exceeded the high limit set in the test configuration.

7.17 Controller Alarm

Controller Error (Stop Code)

This code indicates a error condition has been detected by the process controller. Check the front panel of the process controller (Watlow, JC Systems, Sun, etc) for an error indication.

7.18 Remote Start Error

Remote Start Error Message dialog box

The system failed to start *VibrationVIEW* vibration test.

Part




8 Graph Settings

8.1 Graph settings

Chamber/ Repetitive Shock Graph Settings dialog box

This dialog box is used when creating a new graph using the File..New Graph or Window..New Window menu commands, when changing the settings of the selected graph using the Graph..Edit Graph Settings menu command, or when setting the default graph settings by clicking the "Graph" button in the Chamber Define dialog box.

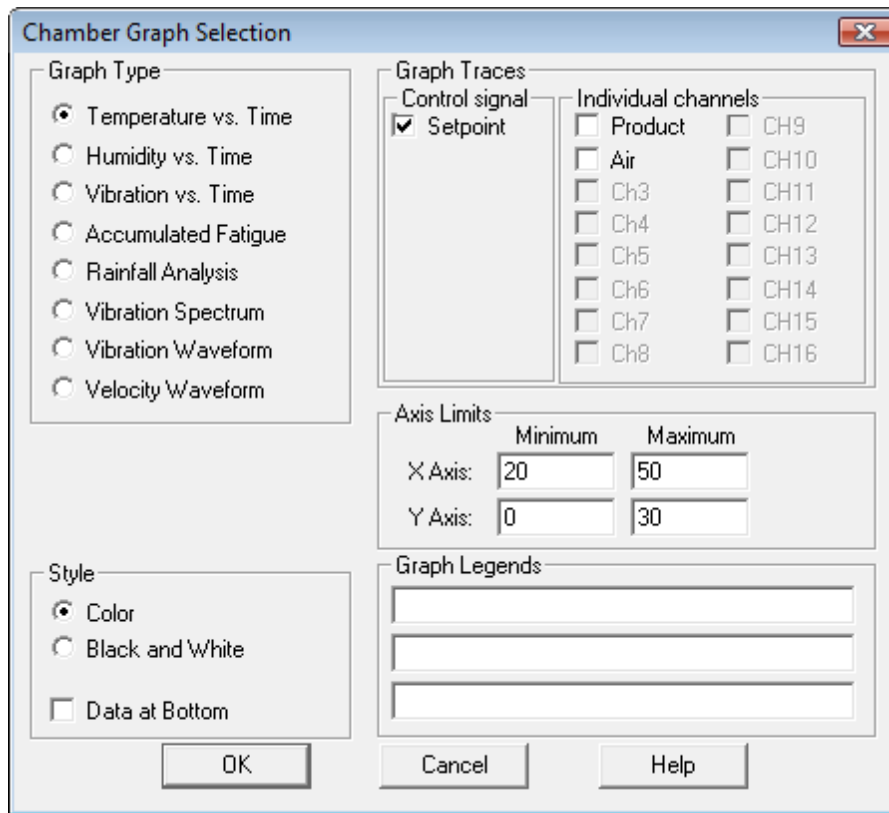

The dialog box is titled "Chamber Graph Selection" and contains several sections for configuring a graph.

- Graph Type:** A list of radio buttons for selecting the graph type:
 - ☒ Temperature vs. Time
 - ☐ Humidity vs. Time
 - ☐ Vibration vs. Time
 - ☐ Accumulated Fatigue
 - ☐ Rainfall Analysis
 - ☐ Vibration Spectrum
 - ☐ Vibration Waveform
 - ☐ Velocity Waveform
- Graph Traces:** A section for selecting traces to display.
 - Control signal:** A checkbox for "Setpoint" is checked.
 - Individual channels:** A grid of checkboxes for channels CH9 through CH16, with "Product" and "Air" also listed. All are currently unchecked.
- Axis Limits:** A section for setting the minimum and maximum values for the X and Y axes.

	Minimum	Maximum
X Axis:	20	50
Y Axis:	0	30
- Style:** A section for selecting the graph style.
 - ☒ Color
 - ☐ Black and White
 - ☐ Data at Bottom
- Graph Legends:** Three empty text boxes for entering legend information.

At the bottom of the dialog are three buttons: "OK", "Cancel", and "Help".

Part


IX

9 Dialog Boxes

9.1 Schedule Loop

Schedule Loop dialog box

This dialog box is accessed by clicking the "Add Loop" button in the HanseVIEW Test Schedule dialog box.

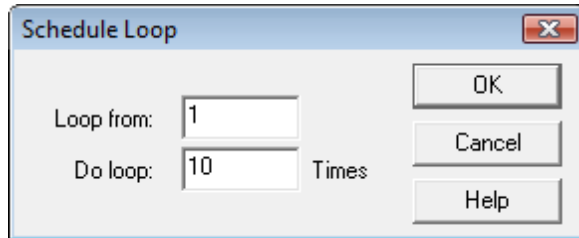


Enter the test number of the first test in the sequence in the "Loop from" entry, and then the total number of times you want the sequence of tests performed in the "Do loop" entry. Then click the "OK" button to enter the loop parameters into the test schedule

9.2 Cursor Display dialog box

Cursor Display dialog box

This dialog box is accessed by selecting the Graph..Cursor Display menu command.

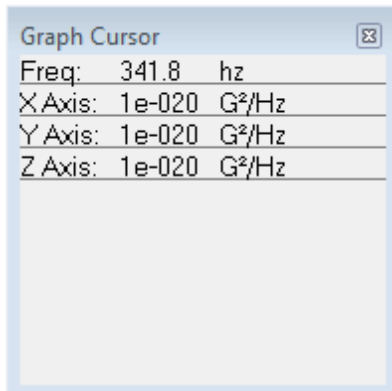


This dialog box will display the values of the graph data at the cursor position in the currently selected graph. The parameters displayed will be specific to the selected graph.

9.3 Manually Edit Setpoints

Edit Value dialog box

Use this command to force control loop set points or manually turn discrete outputs on or off. This box is displayed with the **Edit Setpoints** command button on the Chamber Control Center.

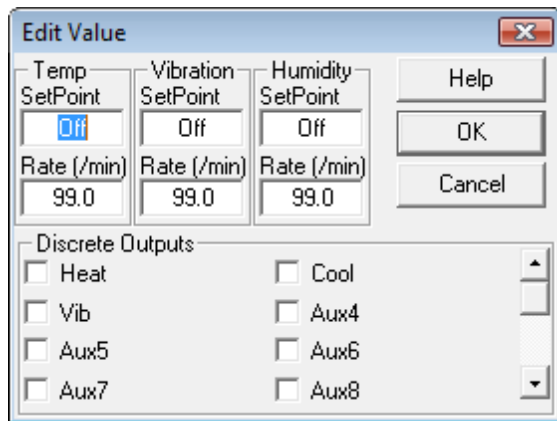

The SetPoints highlighted yellow will be set when the OK button is pressed. The setpoint will transition from current value to the newly entered value at the rate specified. Changing the Rate without changing the SetPoint has no effect.

Forcing outputs during a program run overrides all following set point changes.
Forcing setpoints during a program run overrides all following set point changes.

9.4 Message dialog box

Message dialog box

This dialog box is used to provide status information for an operation that may take more than a couple of seconds.

9.5 Wait message

Wait message

This dialog box indicates that a file transfer is in progress, and provides feedback to the user as to how much remains before the transfer is complete. Please wait until this dialog disappears before continuing.

9.6 Notice Message dialog box


Notice Message dialog box

This dialog box is used to provide a variety of notice messages. The dialog box will stay open until the "OK" button is pressed, but will not interrupt normal program operation.

9.7 Password Entry dialog box

Password Entry dialog box

This dialog box appears whenever a password-protected operation is performed. Type in the password, and click the "OK" button to continue.

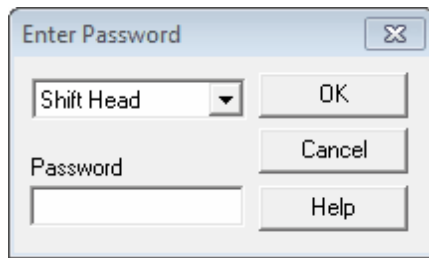

If the Enhanced Security Mode is enabled you will see a drop down box indicating the security level required to perform the action requested. If the Enhanced Security Mode is not enabled then this drop down box will not be visible.

Standard Security Mode

A sheet of paper with the password instructions was attached to the manual you received with your system. Contact Vibration Research Corporation (616-669-3028) if you have forgotten the password.

Note: Use the following procedure to disable the password protection feature of the program:

1. Open the file 'C:\Program Files\HanseVIEW\chamber.ini' using Notepad
2. Find the section labeled [Password]
3. This section should have two lines:
 Cal i br at e=ThePasswor dHer e
 Pr ogr am=ThePasswor dHer e
4. Enter the passwords in either or both lines, in place of ThePasswordHere, and save the shaker.ini file.

The Program password is used to protect the test profiles from unauthorized or inadvertent changes. The Calibrate password is used to protect the system calibration dialog box from unauthorized changes.

Enhanced Security Mode

New, in version 2.2.16, an optional three level security mode can be enabled. This new mode replaces the original security mode.

When a restriction action is performed, a dialog box will appear prompting for the appropriate password. Once the password is entered the system runs at that enhanced security level until the level is manually lowered using the Configuration, Security menu.

The Configuration, Security menu shows a check next to the currently active security level. To change the security level select the desired security level from the menu.

The actions permitted by the three levels are shown in the table below.

Function	Operator	Shift Head	Section Head
Load Test	X	X	X
Run/Stop Test	X	X	X
Save Data	X	X	X
Open saved data file	X	X	X

Run Report	X	X	X
Edit Graphs	X	X	X
View test	X	X	X
Load Test Sequence	X	X	X
Start Test Sequence	X	X	X
Create Test		X	X
Modify Test		X	X
Edit Set points		X	X
Edit Discrete Outputs		X	X
Change Accel Sensitivity		X	X
Reset Data		X	X
Edit PID Parameters		X	X
Edit Channel Labels		X	X
Remote IO		X	X
System Units		X	X
Define Test Sequence		X	X
Edit Test Sequence		X	X
Hardware Parameters			X
Calibration			X
Temp Calibration			X

Enabling Enhanced Security

To enable this security mode perform the following steps

1. Open the file 'C:\Program Files\HanseVIEW\chamber.ini' using Notepad
2. Find the section labeled [Password]
3. Add the following 2 lines.


SectionHead=
ShiftHead=

4. Save the file and restart HanseVIEW
5. Go to the Configuration Menu and select Security, Change Password.
6. Change the password for Section Head and Shift Head. The old password for both entries is blank

To change the password, select the Change Password option from the Configuration, Security menu.

9.8 Change Password

Change Password

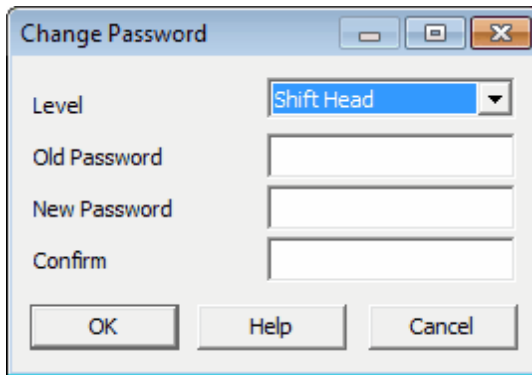

This dialog allows you to change the password of a selected security level. This is only available if the Enhanced Security Mode is enabled.

1. Select the security level password to change.
2. Enter the old password.
3. Enter the new password.
4. Confirm the new password.
5. Click OK.

9.9 Start Time Offset

Chamber/ Repetitive Shock Start Time Offset dialog box


This dialog box is used when to select a starting time for the test.

If a time other than "0:00:00" is entered the test will be advanced to the entered time, then run.

Time may be entered as minutes using shortcut 56m for 56 minutes.

Time may be entered as hours using the shortcut 17h for 17 hours.


Use "Reset and Run" pushbutton to start test from the beginning.

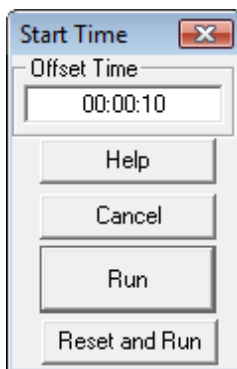

9.10 File Dialog

File Open/Save dialog box

Use this dialog to quickly browse for directories.

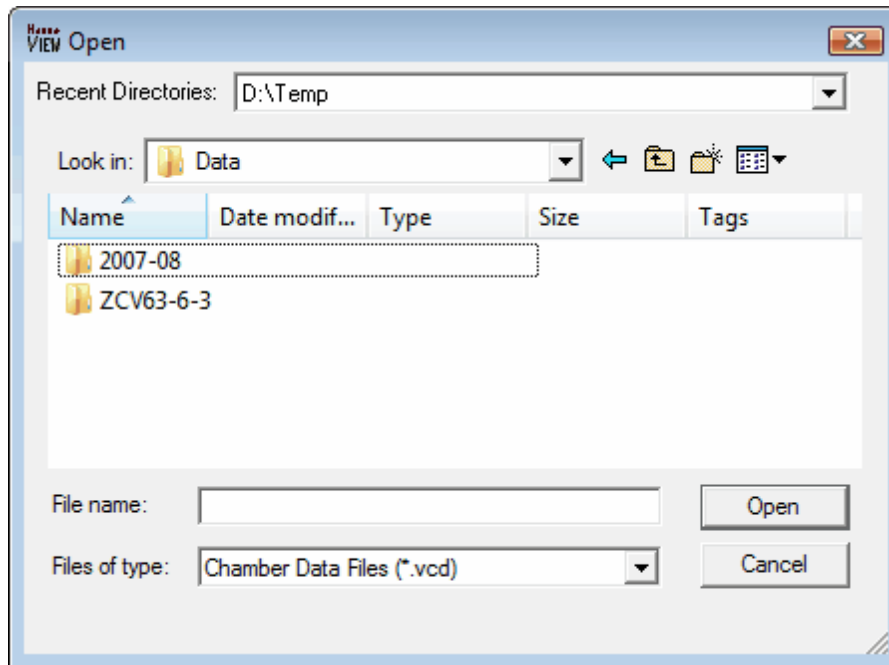

The **Recent Directories** drop list displays a list of directories recently used to save this type of file. Use this drop list to quickly navigate back to these locations. It is automatically updated whenever a file is saved or loaded. If you need to navigate to a location not listed on the **Recent Directories** use the **Save in:** entry to navigate through the windows directory tree. Select a file in the file list, or directly enter a file name into the **File name** box. The **Save as type** may offer alternate file formats for saving and loading.

9.11 Windows Elements

9.11.1 System Menu

9.11.1.1 Restore command (System menu)

Restore command (System menu)

Use this command to return the active window to its size and position before you chose the Maximize or Minimize command.

9.11.1.2 Move command (System menu)

Move command (System menu)

Use this command to display a four-headed arrow that allows you to move the active window or dialog box with the arrow keys.



Note: This command is unavailable if you maximize the window.

Shortcut

Keys: CTRL+F7

9.11.1.3 Size command (System menu)

Size command (System menu)

Use this command to display a four-headed arrow that allows you to resize the active window with the arrow keys.

After the pointer changes to the four-headed arrow:

1. Press one of the DIRECTION keys (left, right, up, or down arrow key) to move the pointer to the border you want to move.
2. Press a DIRECTION key to move the border.
3. Press ENTER when the window is the size you want.

Note: This command is unavailable if you maximize the window.

Shortcut


Mouse: Drag the size bars at the corners or edges of the window.

9.11.1.4 System Minimize Command (System menu)

Minimize command (System Control menu)

Use this command to reduce the HanseVIEW window to an icon.

Shortcut

Mouse: Click the minimize icon  on the title bar.

Keys: ALT+F9

9.11.1.5 Maximize command (System menu)

Maximize command (System menu)

Use this command to enlarge the active window to fill the available screen space.

Shortcut

Mouse: Click the maximize icon  on the title bar; or double-click the title bar.

Keys: CTRL+F10 enlarges a document window.

9.11.1.6 Close command (System menu)

Close command (System menu)

Use this command to close the active window or dialog box.

Double-clicking a Control-menu box is the same as choosing the Close command.

Note: If you have multiple windows open for a single document, the Close command on the document Control menu closes only one window at a time. You can close all windows at once with the Close command on the File menu.


Shortcuts

Keys: CTRL+F4 closes a document window

ALT+F4 closes the HanseVIEW window or dialog box

9.11.2 Title Bar

Title Bar



The title bar is located along the top of a window. It contains the name of the application and current document.

To move the window, drag the title bar. Note: You can also move dialog boxes by dragging their title bars.

A title bar may contain the following elements:

- Application Control-menu
- Document Control-menu
- Maximize
- Minimize
- Name of the application
- Name of the document
- Restore

Index

- A -

about 59
accelerometer 12, 39
accelerometer calibration 12
accelerometer sensitivity 39
active 58
add 52
add annotation 52
advance levels 44
annotation 52, 53
arrange 58
arrange icon 58
assistance 13, 20, 59
autoscale 48
average 66
averaging 66

- B -

bar 53, 54, 93
bitmap file 28
browse 59

- C -

calibrate 13, 37
calibrating 13, 37
calibration 12, 13, 37
cascade 58
Chamber Define Data 71
Chamber Define Vibration PID 64
change size 92
channel 48
channels 48, 68
close 92
color 47
colors 47
command 8
commands 8
common 78
common screen 78
computer requirements 10

configuration 33
configuration menu 33
contents 59
control buttons 55
control center 8, 74
control centers 8
control channels 68
convert 20, 29, 30
copy 27
copy graph 27
create 30
create report 30
CRT view 78
cursor 49, 86
cursor data 49, 86
cursor display 49, 86

- D -

data 27, 28, 29
define 46

- E -

edit 46, 48
edit graph 48
edit test 46
enhanced security 87
enter 14
enter tests 14
escape 92
exit 92
explore 32
explorer 32

- F -

file 26
file menu 26
files: managing 26
filter 68
full 48
full autoscale 48

- G -

gain 66

graph 26, 27
graph color 47
graph settings 48

- H -

help 59
help menu 59
help pointer 59
HID_FILE_EXPORT_MATLAB 28
HID_FILE_SAVEPNG 28
how to 8, 11, 12, 14, 18, 20
how to calibrate 12
how to install software 11
how to run 18

- I -

icon 58
index 8, 59
information 59
installed 59
instructions 10

- J -

JC Systems 11, 33

- L -

line up 58

- M -

maximize 92
menu 8, 26, 33, 43, 57, 59
menus 8
message 87
messages 87
meta file 27
minimize 92
move 53, 91
move annotation 53
mV/g 39

- N -

new 26, 45, 58
new graph 26
new test 45
new window 58
next 29, 44
next data 29
next level 44
non-overlapped 58
normal 78
notice 87
notice message 87
notices 87

- O -

old 20, 29, 30
old data 30
old files 20
old test 29
open 28, 46
open data 28
open recent test 46
open test 46
options 31
overlap 58
overlapped 58

- P -

parameters 33, 66
password 87
password entry 87
passwords 87
previous 29
previous data 29
print 30, 31
print graph 30
print options 31
print report 30
print setup 30

- Q -

quick setup 10

- R -

- read old data 30
- read old files 20
- recent 46
- recent test 46
- redraw 48
- refresh 48
- relocate 91
- remote 34
- remote inputs 34
- remove 52
- remove annotation 52
- report 21, 23, 30
- report graph types 23
- report parameter names 21
- requirements 10
- reset 55
- reset control buttons 55
- resize 92
- restore 91
- retrieve 20
- retrieve data 20
- run 18, 44
- running 44

- S -

- save 27, 28
- Save as .. Text File 27
- save bitmap file 28
- save data 27
- save graph 27, 28
- Save Meta File 27
- schedule 44
- search 59
- security 87
- select 43
- select test type 43
- sensitivity 39
- serial number 59
- set units 40
- settings 30, 48
- setup 10, 30
- setup instructions 10
- show control buttons 55

- size 92
- software 11
- start 44
- status 54
- status bar 54
- stop 44
- stop code 8
- stop codes 8
- stopping 44
- store 20
- store data 20
- style 48

- T -

- test 43
- test menu 43
- test schedule 44
- test type 43
- tile 58
- tile horizontal 58
- tile vertical 58
- tiled 58
- title 93
- title bar 93
- tool 53
- toolbar 53
- trace 48
- traces 48
- type 43, 48
- typical 78
- typical screen 78

- U -

- units 40

- V -

- version 59
- vibrationview 8
- view 53
- view menu 53

- W -

- wait 87

Watlow F4 11, 33

what's this 59

window 57

window list 58

window menu 57

- X -

x-axis 48

- Y -

y-axis 48

y-axis autoscale 48